


DOOR LOCK AND RELEASE LEVERS

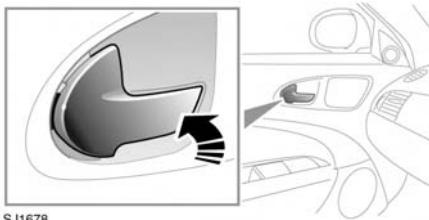

SJ1678

- Press the door release lever inwards to lock the door. If both doors are closed, operating the locking lever on either front door will lock both doors and the luggage compartment.
- Pull the release lever to unlock the door. If the doors were locked from inside and the alarm is disarmed, operating the locking lever on either front door will unlock both doors.

Note: If the car was locked using the Jaguar Smart Key, then operating the locking/release lever will only unlock/release that door and the alarm will sound.

Note: If the vehicle has been double-locked, then the interior door lock and release levers will not operate. The vehicle must be unlocked using the Jaguar Smart Key.

- Pull the release lever to open the door.

SINGLE LOCKING

Press the lock button on the Jaguar Smart Key briefly. Single locking secures the vehicle and prevents the doors and luggage compartment being opened from outside of the vehicle. The doors can be unlocked and opened from inside the vehicle. The hazard warning lamps will flash once as confirmation.

DOUBLE LOCKING



Never double lock the vehicle with people, children or pets inside. In the event of an emergency they would be unable to escape, and the emergency services would be unable to release them quickly.

When the vehicle is double-locked the doors cannot be opened, either from inside or outside the vehicle.

Press the lock button twice within 3 seconds. Double locking secures the vehicle and prevents the doors and luggage compartment being unlocked or opened from inside or outside of the vehicle, except with the correct Jaguar Smart Key. The hazard warning lamps will flash twice (with a long second flash) and an audible warning will sound, as confirmation.



The audible warning can be enabled/disabled by your Dealer/Authorised Repairer.

LOCK CONFIRMATION

If you are uncertain whether the vehicle is locked and armed (either by single or double locking), press the lock button again. The hazard warning lights will flash to indicate and confirm the current armed/disarmed status.

Note: If the vehicle is not already locked and armed, pressing the lock button will single lock the vehicle. Press again to double lock.

MISLOCK

If one of the doors, the bonnet, or the luggage compartment are not shut fully when the vehicle is locked using the Jaguar Smart Key or by Keyless locking, the vehicle will not lock and two warning tones will sound. Check that all doors, the bonnet and the luggage compartment are closed properly and lock the vehicle again.