


## PARKING AID OPERATION

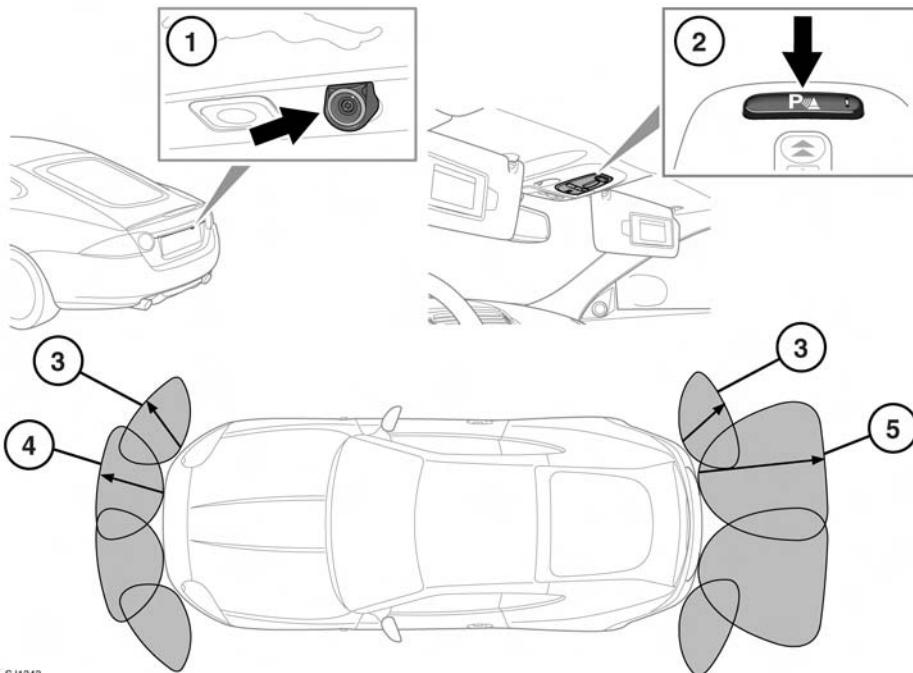

1. Rear view camera. See **82, REAR VIEW CAMERA**.
2. Parking aid switch: Press to turn the parking aid on and off.
3. Approximately 600 mm (24 inches).
4. Approximately 800 mm (31 inches).
5. Approximately 1800 mm (71 inches).

**⚠** **It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them. Some overhanging objects, barriers, small children, animals, thin obstructions or painted surfaces may not be detected by the system.**

**!** Systems using the same frequency band as the front parking sensors, may cause irregular tones to be emitted.

**Note:** The sensors are active when the gear selector is in neutral, and in drive after moving from reverse. Therefore, if an obstacle is detected an audible warning tone will sound.

## REAR FITTED ACCESSORIES

Particular care must be taken when reversing with rear fitted accessories, as the rear parking aid will only indicate the distance from the bumper to the obstacle.