

## CHANGING A FUSE

- ⚠ Always turn off the ignition system and the affected electrical circuit, before replacing a fuse.
- ⚠ Fit Jaguar approved replacement fuses of the same rating and type, or fuses of matching specification.

⚠ If the replacement fuse blows after installation, the system should be checked by your Dealer/Authorised Repairer.

**Note:** Jaguar recommend that owners do not remove or replace relays. It is recommended that you seek qualified assistance in the event of a relay failure.

Spare fuses and a fuse removal tool, are located in the rear seat compartment fuse box.

## ENGINE COMPARTMENT FUSE BOX

Fuse No	Rating (amps)	Fuse Colour	Circuit
F1	-	-	-
F2	5A	Tan	Adaptive front lighting system - LH.
F3	5A	Tan	DSC ECU.
F4	30A	Green	Powerwash pump.
F5	-	-	-
F6	5A	Tan	Adaptive cruise control.
F7	40A	Orange	Front left screen heater.
F8	-	-	-
F9	15A	Blue	Cigar lighter.
F10	15A	Blue	Horn.
F11	-	-	-
F12	10A	Red	Cluster VAPS.
F13	5A	Tan	Adaptive front lighting system - RH.
F14	15A	Blue	Ignition coils.
F15	-	-	-
F16	-	-	-
F17	15A	Blue	ECM, TCM memory.
F18	20A	Yellow	EMS main, EMS secondary control.
F19	30A	Green	Starter.
F20	40A	Orange	DSC pump.
F21	-	-	-