

Fuses

CHANGING A FUSE

- ① Always turn off the ignition system and the affected electrical circuit, before replacing a fuse.
- ① Fit Jaguar approved replacement fuses of the same rating and type, or fuses of matching specification.



If the replacement fuse blows after installation, the system should be checked by your Dealer/Authorised Repairer.

Note: Jaguar recommend that owners do not remove or replace relays. It is recommended that you seek qualified assistance in the event of a relay failure.

Spare fuses and a fuse removal tool, are located in the rear seat compartment fuse box.

ENGINE COMPARTMENT FUSE BOX

Fuse No	Rating (amps)	Fuse Colour	Circuit
F1	-	-	-
F2	5A	Tan	Adaptive front lighting system - LH.
F3	5A	Tan	DSC ECU.
F4	30A	Green	Powerwash pump.
F5	-	-	-
F6	5A	Tan	Adaptive cruise control.
F7	40A	Orange	Front left screen heater.
F8	-	-	-
F9	15A	Blue	Cigar lighter.
F10	15A	Blue	Horn.
F11	-	-	-
F12	10A	Red	Cluster VAPS.
F13	5A	Tan	Adaptive front lighting system - RH.
F14	15A	Blue	Ignition coils.
F15	-	-	-
F16	-	-	-
F17	15A	Blue	ECM, TCM memory.
F18	20A	Yellow	EMS main, EMS secondary control.
F19	30A	Green	Starter.
F20	40A	Orange	DSC pump.
F21	-	-	-