


## AUDIO CONTROLS

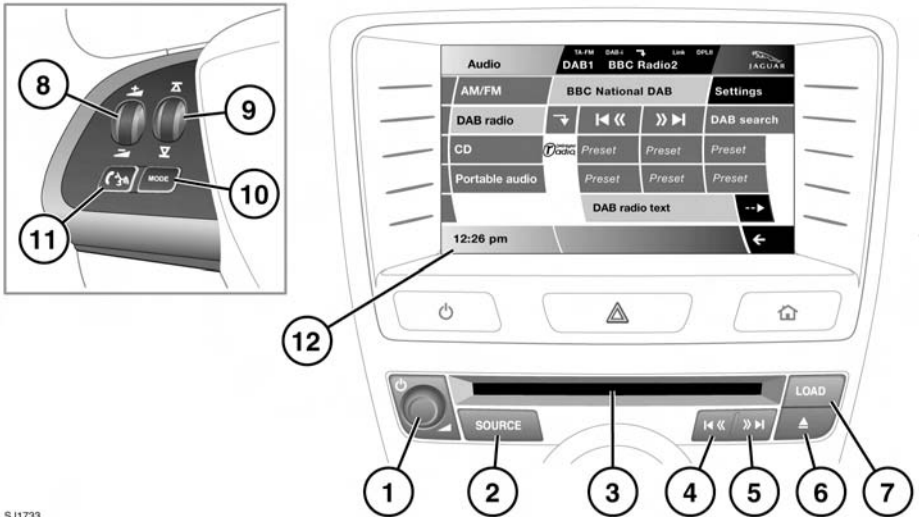

SJ1733

**⚠ In the interest of safety, only operate, adjust or view the system when it is safe to do so.**

**⚠ Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.**

1. Press to switch the audio system on/off.  
Rotate to adjust volume level.

**Note:** The audio system will operate with the ignition on or off, but will switch off with the ignition. Switch the audio on again if required. The system will remain on for approximately 10 minutes.

2. **SOURCE:** Press repeatedly to scroll through all audio/video sources.
3. CD loading slot.

The player will accommodate one disc or up to six discs depending on the audio unit fitted, see **103, LOADING COMPACT DISCS.**

4. Seek down:

Short press:

- To auto seek down the frequency to the next radio station.
- To select the previous track or start of current track on chosen audio source - CD, MP3 etc.

Long press:

- To activate radio manual seek mode.
- To skip backward through current audio source track.

With radio manual seek mode activated, further short presses will change the frequency in single decrements. A further long press will scan backward through the current waveband until the button is released.