

## SCREEN MODES

Touch the screen mode selection key to view a series of icons depicting different screen modes (as detailed below). Touch the relevant icon to select the desired screen mode.

-  Full screen view.
-  Split screen view. A more detailed view of the local area and road system is displayed on the right.
-  Compass screen.
-  Shows the next junction in the right half screen.
-  This view is only available when travelling on a motorway. It displays automatically to show remaining motorway exits along your route.
-  Shows list of forthcoming junctions and turn directions on the right half screen.

## SETTING A DESTINATION

After touching **Agree**, the initial Main menu screen is displayed.

From the Main menu, select **Destination Entry**.

Select **Address** from the **Destination** screen and input the town name.

Once sufficient letters have been entered, touch **List** to display all the possible towns.

If necessary, use the scroll arrows to the left of the list to search up or down. Select the town you require.

Now enter the road name. Once sufficient letters have been entered, touch **List** to display all the possible roads.

Select the road you require.

Drive away following the voice guidance given

Enter the house number of the address (if known) then touch **OK** to confirm.

If the house number is not known, select **OK** - the mid-point of the road is then used as the destination.

Once the address has been entered, the map screen showing the route settings and destination details is displayed.

Touch **Route Prefs.** to change the route settings or **Destination** to start the route calculation.

If a destination is already set, touch **Waypoint** to add the entered address as a waypoint in the journey.

## ROUTE PREFERENCES

If **Route Prefs** is selected, the Route Preference screen will be displayed.

Use the arrow buttons to scroll through the list. Touch to highlight the desired option(s) and then select **OK**.

## START GUIDANCE

After selecting a destination, the system will calculate the route.

There is now a choice to select **3 Routes**, **Change Route** or to **Start** navigation guidance.

Touch **3 Routes** to display a choice of three different route options on the map.

The three routes are shown in three different colours. Three corresponding boxes showing the route details, are also displayed.

Select route **1**, **2** or **3** by touching the appropriate box.

Touch **Change Route** to select an alternative route or route options.

When you have chosen your route and route options, select **Start**.

by the system.