

# Fluid level checks

## CHECKING THE ENGINE OIL LEVEL

- ! Check the engine oil weekly. If any significant or sudden drop in oil level is noted, seek qualified assistance.
- ! If the message **ENGINE OIL PRESSURE LOW** is displayed, stop the engine as soon as it is safe to do so and seek qualified assistance. Do not start the engine until the cause has been rectified.


Prior to checking the oil level ensure that the vehicle is on level ground.

Ensure that:

- The engine oil has reached working temperature (oil is hot).
- The engine has been switched off for 10 minutes, as the system will not give an accurate reading until the oil level has stabilised.

The oil level can then be checked as follows:

1. Switch on the ignition (do not start the engine).
2. Ensure Park (P) is selected.
3. Press the trip button (on the end of the lighting control stalk) repeatedly until the oil can icon, along with the current oil level status and topping-up advice is displayed in the message centre, as follows.

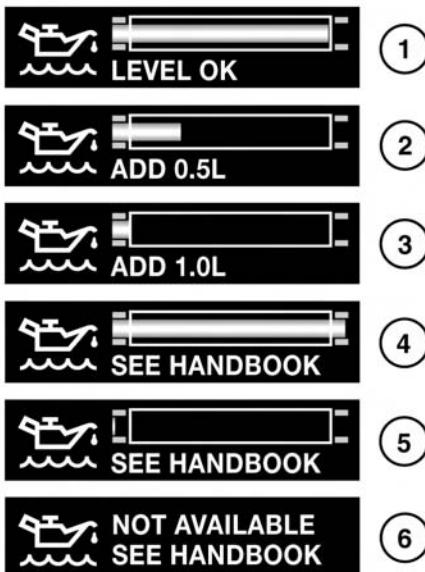

SJ1713

1. Oil level at recommended level. No top-up required.
2. Add 0.5 litres (0.9 pints) of oil.
3. Add 1 litre (1.8 pints) of oil.
4. Oil level above maximum for safe operation. Do not drive the vehicle. Seek qualified assistance.
5. Oil level below minimum for safe operation. Add 1.5 litres (2.6 pints) of oil, then recheck the level.
6. Oil level stabilising, oil level not available. Wait 10 minutes, then recheck the oil level display.  
If this display is accompanied by the warning message **ENGINE OIL LEVEL MONITOR SYSTEM FAULT**, seek qualified assistance.