


RADIO CONTROLS

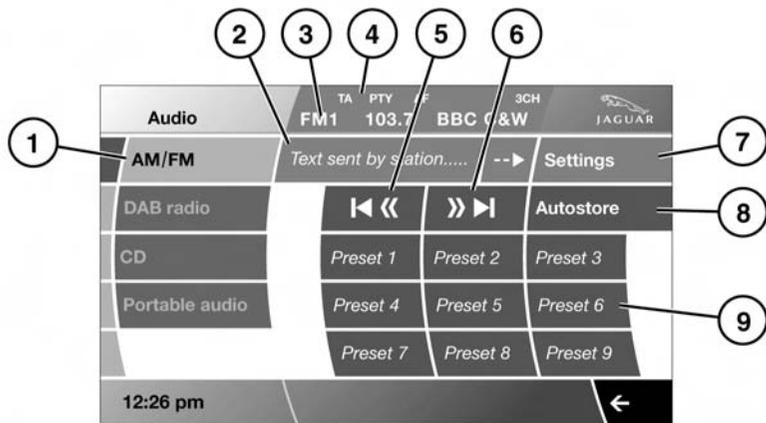

SJ1735

1. **AM/FM:** Waveband selection. Touch to view and select a waveband (FM1, FM2 or AM). The radio will tune to the last used station on that waveband.
2. Text sent by radio station (FM only). Touch the adjacent arrow to view the complete message as a pop-up.
To set the display to show or hide FM text; select **Settings - Options - FM text (On or Off)**.
3. Indicates currently selected waveband, station frequency and station name.
4. RDS options selected in **Settings**, see **95, RADIO DATA SYSTEM (RDS)**.
5. Seek down:
 - Short touch to auto seek down the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.
6. Seek up:
 - Short touch to auto seek up the frequency to the next radio station.
 - Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
7. **Settings:** Touch to access: **Sound, Bal/Fade, Options** or **PTY**, see **92, AUDIO SETTINGS** and **95, RADIO DATA SYSTEM (RDS)**.
8. **Autostore:**
 - Touch and hold for at least 2 seconds to find and store the strongest 9 stations on the selected waveband (AM, FM).
 - When programmes have been set, touch and release **Autostore** to switch between the automatically and manually stored preset stations.