


## RADIO CONTROLS

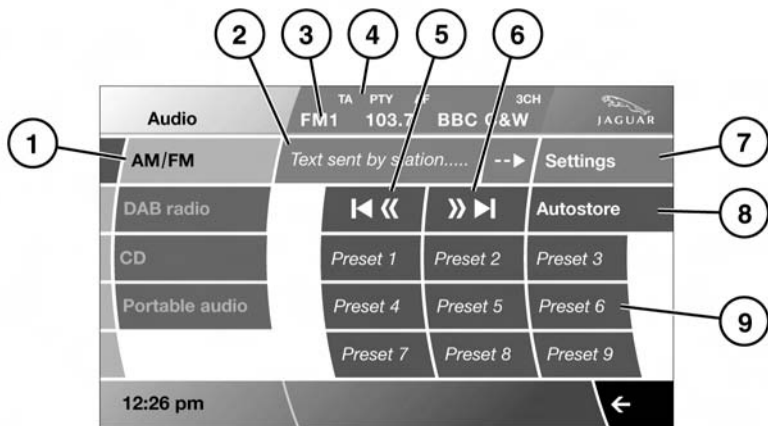

SJ1735

- 1. AM/FM:** Waveband selection. Touch to view and select a waveband (FM1, FM2 or AM). The radio will tune to the last used station on that waveband.
- 2.** Text sent by radio station (FM only). Touch the adjacent arrow to view the complete message as a pop-up.  
To set the display to show or hide FM text; select **Settings - Options - FM text (On or Off)**.
- 3.** Indicates currently selected waveband, station frequency and station name.
- 4.** RDS options selected in **Settings**, see **95, RADIO DATA SYSTEM (RDS)**.
- 5.** Seek down:
  - Short touch to auto seek down the frequency to the next radio station.
  - Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.
- 6.** Seek up:
  - Short touch to auto seek up the frequency to the next radio station.
  - Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
- 7. Settings:** Touch to access: **Sound, Bal/Fade, Options** or **PTY**, see **92, AUDIO SETTINGS** and **95, RADIO DATA SYSTEM (RDS)**.
- 8. Autostore:**
  - Touch and hold for at least 2 seconds to find and store the strongest 9 stations on the selected waveband (AM, FM).
  - When programmes have been set, touch and release **Autostore** to switch between the automatically and manually stored preset stations.