

Vehicle battery

- battery and the other end to the negative (-) remote terminal of the vehicle.
5. Start the disabled vehicle. Allow the engine to idle for 5 minutes before disconnecting the leads.



Used batteries must be disposed of correctly, as they contain a number of harmful substances. Seek advice from your Dealer/Authorised Repairer and/or your local authority.

DISCONNECTING THE JUMP LEADS

- !** To avoid serious injury use extreme caution when removing the jump leads as the engine will be running on the previously disabled vehicle. This means that you may be working close to components which are moving at high speed, carry high voltage, or may be hot.

Note: Do not switch on any electrical equipment until after the leads have been disconnected.

The engine should be running on the previously disabled vehicle and the engine switched off on the donor vehicle. Disconnect the jump leads in the exact reverse order of that used for connection.

CHARGING THE VEHICLE BATTERY

- !** The battery must be disconnected and removed from the vehicle before charging.
- !** Battery disconnection, removal and replacement, should only be carried out by qualified personnel. Consult your Dealer/Authorised Repairer.

REPLACING THE VEHICLE BATTERY

- !** Battery disconnection, removal and replacement, should only be carried out by qualified personnel. Consult your Dealer/Authorised Repairer.