


# Portable media

## PORTRABLE MEDIA CONTROLS

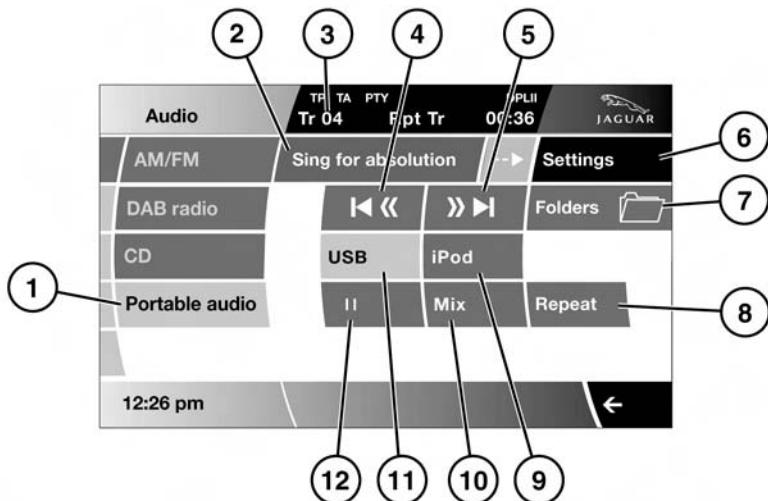

SJ1738

1. **Portable audio:** Select to view the portable audio menu.

**Note:** Sound quality and volume levels available from devices connected to the auxiliary input may vary widely.

2. Display of information about the current track, including track title, artist, album and genre. Touch the adjacent arrow to toggle through the information which is displayed as a pop-up.

If there is no information available, the screen will display the text **No entry**.

3. Display shows: Track number (Tr 02), chosen function (Rpt Tr, Mix all etc.) and track elapsed run-time (00.00 or Paused).

4. Skip/Scan backward:

- Touch and release to skip to the previous track.
- Touch and hold to scan backwards through the current track. Playback will resume when the soft key is released.

5. Skip/Scan forward:

- Touch and release to skip to the next track.
- Touch and hold to scan forwards through the current track. Play will resume when the soft key is released.

6. **Settings:** Touch to view portable media settings.

- **Sound and Bal/Fade:** see **92, AUDIO SETTINGS**.

- **Options:** Touch to select:

**Traffic:** Activate/deactivate traffic announcements (TA).

**Portable audio text:**

Activate/deactivate playback information.

**Page jump** helps you to navigate a very long list of items by setting the number of items scrolled through when a double-arrow page scroll button is selected.