


## PORTABLE MEDIA CONTROLS

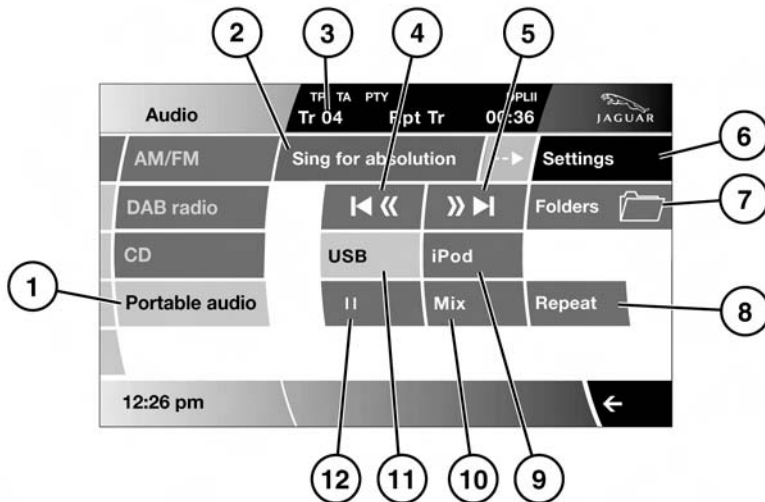

SJ1738

1. **Portable audio:** Select to view the portable audio menu.
 

**Note:** *Sound quality and volume levels available from devices connected to the auxiliary input may vary widely.*
2. Display of information about the current track, including track title, artist, album and genre. Touch the adjacent arrow to toggle through the information which is displayed as a pop-up.
 

If there is no information available, the screen will display the text **No entry**.
3. Display shows: Track number (Tr 02), chosen function (Rpt Tr, Mix all etc.) and track elapsed run-time (00.00 or Paused).
4. Skip/Scan backward:
  - Touch and release to skip to the previous track.
  - Touch and hold to scan backwards through the current track. Playback will resume when the soft key is released.
5. Skip/Scan forward:
  - Touch and release to skip to the next track.
  - Touch and hold to scan forwards through the current track. Play will resume when the soft key is released.
6. **Settings:** Touch to view portable media settings.
  - **Sound and Bal/Fade:** see **92, AUDIO SETTINGS**.
  - **Options:** Touch to select:
    - Traffic:** Activate/deactivate traffic announcements (TA).
    - Portable audio text:** Activate/deactivate playback information.
    - Page jump** helps you to navigate a very long list of items by setting the number of items scrolled through when a double-arrow page scroll button is selected.