
ELECTRIC PARKING BRAKE (EPB)

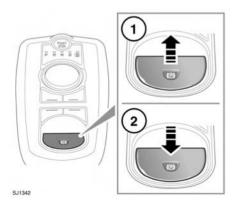

The switch which operates the parking brake is mounted on the centre console to the rear of the gear selector.

To engage the parking brake: Pull the parking brake switch upwards (1) and release. The switch will return to the neutral position.

The red brake warning lamp on the instrument panel will illuminate.

The Drive Away Release feature allows the parking brake to release automatically as the vehicle is driven away.

The warning lamp will remain on briefly if the parking brake is applied when the ignition system is reverted to convenience mode.

If a fault in the system is detected, the amber brake warning lamp will illuminate and PARK BRAKE FAULT or CANNOT APPLY PARK BRAKE will be displayed in the message centre. Seek qualified assistance as soon as possible. If the battery has been discharged or disconnected, **APPLY FOOT AND PARK BRAKE** will be displayed in the message centre when the ignition is next switched on. Depress the foot brake and pull the parking brake switch up to apply the parking brake. This is required to reset the parking brake system. The parking brake will now function correctly.

To disengage the parking brake: With the ignition system on or with the engine running, apply the foot brake and press the parking brake switch down (2).

If the parking brake is applied while the vehicle is stationary and **D** or **R** is selected, applying the throttle will automatically release the parking brake.

The parking brake is also automatically released when the gear selector is moved from the **P** position.

If the parking brake is inadvertently applied when the vehicle is moving at above 3 km/h (1.8 mph), **PARK BRAKE APPLIED** is displayed in the message centre, the warning indicator in the instrument panel will illuminate and a warning chime will sound.

If the parking brake is applied whilst the vehicle is moving, releasing the switch will disengage the parking brake. The parking brake cannot be applied when the vehicle is moving, if the accelerator pedal is pressed.

Note: If the vehicle is in motion, the parking brake should only be used as an emergency brake.



Always apply the parking brake when the vehicle is parked.