

**8. Mix:**

- Briefly touch to play random tracks from CD. A **Mix CD** message is displayed.
- On MP3 CDs, a short press will play random track from the current folder. A **Mix folder** message is displayed.
- Touch and hold to play random tracks from all the loaded CDs or all MP3 folders. A **Mix all** message is displayed.
- Touch and release again to cancel **Mix** mode.

**9. Repeat:**

In **CD** or **MP3** mode.

- Briefly touch to repeat the current track. A **Rpt Tr** is displayed.
- Touch and hold (2 seconds) to repeat the whole CD or all tracks in the current folder (MP3).
- Touch **Repeat** again to cancel and return to normal play back.

**10. CD loading and selection:**

- Indicates when CDs are loaded, not loaded or playing, see **103, LOADING COMPACT DISCS**.
- Touch numbered square to play that CD.

**11. Folders:** MP3 CDs:

- Select to view the folder list on the device.
- Select the folder name to display the tracks in that folder.
- Select a track to start playback of that track. Play will continue through the remainder of the tracks in the folder.

**12. Settings:** Touch to view portable media settings.

- **Sound and Bal/Fade:** see **92, AUDIO SETTINGS**.

- **Options:** Touch to select:

**Traffic:** Activate/deactivate traffic announcements (TA).

**CD text:** Activate/deactivate playback information.

13. Display shows: Track number (Tr 02), chosen function (Rpt Tr, Mix all etc.) and track elapsed run-time (00.00 or Paused).
14. Display of information (if available) about the current track, including track title, artist, album and genre. Touch the adjacent arrow to toggle through the information which is displayed as a pop-up.

**LOADING COMPACT DISCS**

Do not force the disc into the slot.



Do not use irregular shaped CDs and CDs with a scratch protection film or self-adhesive labels attached.



The CD unit will play compact discs that conform to the international Red Book standard audio specification. Playback of CDs not conforming to this standard cannot be guaranteed.



Recordable (CD-R) discs and re-writable (CD-RW) discs may not function correctly.



Dual format, dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and consequently playback cannot be guaranteed and jamming may occur.

It is recommended that only high quality 12 cm (4.7 in.) circular discs are used.

The unit will play Compact Disc Digital Audio (CDDA) discs, MP3 and WMA files.

The CD player will accommodate one CD or up to six CDs depending on the audio unit fitted to your vehicle.