

# Warning lamps

## AUDIBLE WARNINGS AND INDICATORS

Hazard or Condition	Chime or tone/remedy
External lamps remain on when the driver's door is opened.	A chime will sound until the lamps are switched off or driver's door is closed (unless the lighting control is in <b>AUTO</b> position).
Hazard warning indicators on.	A ticking will sound until the hazard warning indicators are switched off.
Direction indicators on.	A ticking will sound until the indicators are switched off.
Memory <b>1, 2 or 3</b> configuration saved.	A short tone as the memory selection is saved.
Airbag system failure	A tone sequence is repeated five times. Seek qualified assistance as soon as possible.
Seat belt reminder.	A chime will sound if a seat belt is unbuckled whilst the vehicle is moving. The warning will cease if the occupied seat's belt is re-buckled, the ignition is turned off or more than 5 minutes has elapsed.
Electric Parking Brake (EPB).	If the EPB is applied while the vehicle is moving a continuous chime will sound; release the EPB. If there is a fault with the system which would prevent the application of the EPB, a brief sequence of chimes is initiated.
Adaptive Cruise Control (ACC) driver intervene and Forward Alert.	Multiple chime. Apply the brakes.
ACC low speed automatic switch off.	A chime will sound to indicate that the ACC system is no longer operating.
Speed is over 15 km/h (9 mph) above the set limit speed.	A short warning chime. Reduce speed.
Entry delay warning (European markets only).	Intermittent slow, low pitched chime. Disarm vehicle.
Convertible roof starting to open or close.	High-pitched single chime.
The Jaguar Smart Key cannot be detected.	A chime will sound. The Smart Key should be docked in the starter control unit. See <b>69, KEYLESS START BACKUP</b> .
The Jaguar Smart Key is to be removed from the starter control unit.	A chime will sound for 60 seconds if the Smart Key is in the starter control unit and the driver's door is opened. The remote handset should be undocked from the starter control unit. See <b>69, KEYLESS START BACKUP</b> .
DSC OFF	A chime will sound.