

# Audio overview

## 5. Seek up:

Short press:

- To auto seek up the frequency to the next radio station.
- To select the next track on chosen audio source - CD, MP3 etc.

Long press:

- To activate radio manual seek mode.
- To scan forwards through the current audio source track.

With radio manual seek mode activated, further short presses will change the frequency in single increments. A further long press will scan forwards through the current waveband until the button is released.

## 6. CD eject button.

## 7. **LOAD:** Press to load a CD, see **102, CD PLAYER CONTROLS.**

## 8. Rotate to adjust volume.

## 9. Rotate (up or down) and release repeatedly to scroll through:

- The radio presets.
- The previous track or start of next track on chosen audio source - CD, MP3 etc.

## 10. **MODE:** Press repeatedly to scroll through all audio sources.

## 11. If Telephone control are not fitted, press to mute/un-mute audio. Otherwise, if Telephone is fitted, see **108, TELEPHONE SYSTEM OVERVIEW.**

## 12. Touch screen.

## AUDIO SETTINGS

To access: **Sound, Bal/Fade, Options** or **PTY**, select **Settings** on the touch screen.

### Sound:

Under **Sound** there is:


**DSP** (Digital Signal Processing).

- Select to change to optimise the sound for: **Front, Driver** or **All**.

**Stereo** or **3 Ch.** (3-channel stereo).

- Select to alter the levels of, Bass, Treble, or Sub (subwoofer). Increase or decrease by touching the + or - buttons.
- Also in **3 Ch.**, scroll down to change the levels for, **Centre** and **Surround**.

**Bal/Fade**, Balance (left to right) and Fade (front to rear):

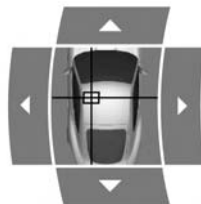

SJ1734

- Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle (the focal cross-hairs will appear red when not in the default position).

### Options:

- Various setting options.

### PTY (programme type):

- Touch to select a list of PTY categories that contain channels. Select a PTY category to display a list of channels in that category.