

Entering the vehicle

REMOTE KEY FOB BATTERY REPLACEMENT

When the battery needs renewing, there will be a significant decrease in the effective range and the message **SMART KEY BATTERY LOW** is displayed in the message centre.



SJ1762

To replace the battery:

1. Press the release button on the side of the Jaguar Smart Key and pull the key blade from the Smart Key.
2. Remove the two side covers, one at a time, by inserting a small flat-bladed screwdriver

between the cover and body, then gently twist the screwdriver.

3. Insert the screwdriver between the two body halves and twist gently to separate.
4. Remove the printed circuit board, taking care not to touch the battery terminals.
5. Remove the old battery, then fit a new CR2032 type battery (available from your Dealer/Authorised Repairer), with the positive (+) side downwards.

Refit the parts in reverse order, ensuring they click securely into place.



Battery disposal: Used batteries must be disposed of correctly, as they contain harmful substances. Seek advice on disposal from your Dealer/Authorised Repairer and/or your local authority.