

## AIRBAG WARNING LAMP



The airbag warning lamp is displayed in the instrument pack and will illuminate as a bulb check when the ignition is turned on.



**If the warning lamp indicates that a fault is present in the system, do not use a child restraint on the front passenger seat.**

If any of the following warning indicator conditions occur, the vehicle should be checked by your Dealer/Authorised repairer immediately.

- The warning indicator fails to illuminate when the START/STOP button is initially switched on.
- The warning indicator fails to extinguish within 6 seconds of the START/STOP button being switched on.
- The warning indicator illuminates at any time other than during the bulb check.

## ROLLOVER BARS



**Do not place any objects on top of the Rollover Protection Device (RPD) system trim covers behind the rear passenger head restraints as they could prevent correct deployment of the system.**



**Do not let anyone sit on the top cover.**

***Note:** If the convertible roof is closed when the RPD is deployed, the bars are designed to break through the rear screen.*

## AIRBAG SERVICE INFORMATION



**Do not attempt to service, repair, replace, modify, or tamper with, any part of the SRS. This includes wiring or components in the vicinity of SRS components. Doing so may cause the system to trigger, or render the system inoperative.**



**Do not use any electrical test equipment or devices in the vicinity of SRS components or wiring. Doing so may cause the system to trigger, or render the system inoperative.**

All of the following operations should only be carried out by a Dealer/Authorised Repairer, or suitably qualified person:-

- Removal or repair of any wiring or component in the vicinity of any SRS components.
- Installation of electrical, or electronic, equipment and accessories.
- Modification to the front or sides of the vehicle exterior.
- Attachment of accessories to the front or sides of the vehicle.