


CD player

CD PLAYER CONTROLS

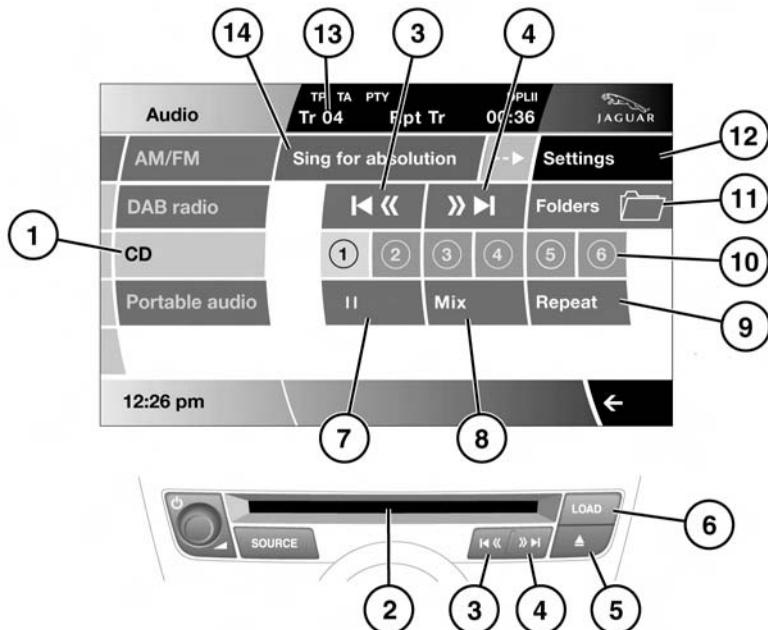

SJ1739

1. **CD:** Select to view the CD menu.
2. CD loading slot, see **103, LOADING COMPACT DISCS.**
3. Skip/Scan backward:
 - Touch and release within 3 seconds of track playback to skip to the previous track.
 - Touch and release after 3 seconds of track playback to skip to the beginning of the current track.
 - Touch and hold to scan backwards through the current track. Playback will resume when the button is released.
4. Skip/Scan forward:
 - Touch and release to skip to the next track on the current CD.
 - Touch and hold to scan forwards through the current track. Playback will resume when either button is released.
5. CD eject button:
 - A short press will eject a single CD, a long press will eject each loaded CD in turn (six disc player only).
 - To stop ejecting multiple discs, select **Cancel** on the touch-screen.
6. **Load:** Select before loading multiple CDs, see **103, LOADING COMPACT DISCS.**
7. **Pause/Play:** Select to pause playback. Select again to resume playback.