

9. Station presets: Each waveband has 9 preset positions.
 - Touch and release to tune to the station stored on that preset.
 - Touch and hold to store the current station on that preset.
 - Use the seek buttons on the steering wheel to change to the next or previous preset station.

RADIO DATA SYSTEM (RDS)

Your radio is equipped with RDS which enables the audio unit to receive additional information with normal FM radio signals.

Note: *Not all FM radio stations broadcast RDS information.*

Select **Settings (5) - Options** to alter RDS settings.

- **Traffic (TA):** Provides local travel information.
- **Alternative Frequency (AF):** Select to allow the radio to automatically re-tune to a stronger alternative frequency for the current station. This is useful on a journey where the vehicle travels through different transmitter areas.
- **Regionalisation (REG):** Select to prevent the radio tuning into an alternative local station that has a stronger signal.
- **Enhanced Other Networks (EON):** Select to allow local traffic bulletins broadcast by local stations to interrupt the broadcast when listening to a national station.
- **FM text:** Select to view text broadcast by FM stations. Text is displayed on the touch screen (2).