


## FORWARD ALERT FUNCTION

Limited detection and warning of objects ahead, is provided during ACC operation by the ACC **Forward Alert** warning. The enhanced forward alert feature additionally provides warnings when ACC is not engaged; if an object is detected close ahead, then the warning tone and message will be issued. The brakes will not be applied.

The forward alert system does not initiate any action. The driver must take appropriate action when the **Forward Alert** message is displayed. However, the system monitors driver actions (e.g. braking, steering or indicating) and may not initiate the warning display if the appropriate action has been taken early enough.

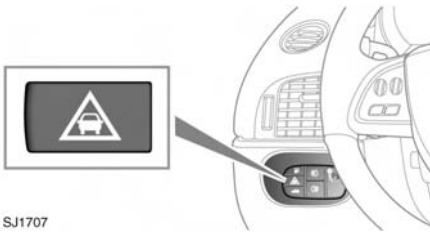

SJ1707

Press the button to switch Forward alert on or off.




When the warning lamp in the instrument panel is on, Forward alert is active.

The sensitivity of the warning can only be adjusted with ACC disengaged. Adjust as follows:

- Roll the gap adjustment control downwards to decrease the sensitivity of the alert.
- Roll the gap adjustment control upwards to increase the sensitivity of the alert.

**Note:** *The forward alert set gap is retained when the ignition is switched off.*

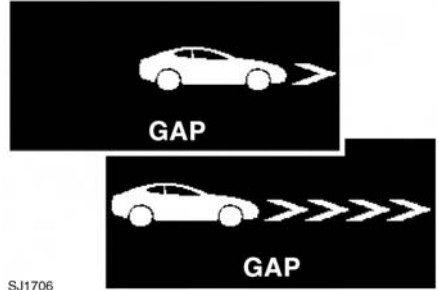

SJ1706

**Forward Alert** is displayed in the message centre.