

# Fuses

Fuse No	Rating (amps)	Fuse Colour	Circuit
F14	10A	Red	Navigation, VICS, power.
F15	-	-	-
F16	-	-	-
F17	10A	Red	Restraints control module, Instrument pack, Occupancy classification sensor.
F18	30A	Green	Electric Parking Brake (EPB).
F19	10A	Red	Supercharged active exhaust.
F20	-	-	-
F21	15A	Blue	IHU, supply (IAV, ICM, ICP).
F22	5A	Tan	Phone, VEMS, power.
F23	30A	Green	Heated rear screen.
F24	10A	Red	AUU.
F25	10A	Red	DVD, power.
F26	-	-	-
F27	10A	Red	Pedestrian impact sensor.
F28	40A	Orange	E-Diff.
F29	-	-	-
F30	40A	Orange	Power roof rear quarters.
F31	30A	Green	Power Amp supply.
F32	40A	Orange	Power roof supply.
F33	30A	Green	Fuel pump module.
F34	40A	Orange	Blower motor.

## REAR SEAT COMPARTMENT FUSE BOX

Fuse No	Rating (amps)	Fuse Colour	Circuit
F1	20A	Yellow	Climate seats.
F2	10A	Red	ETS, Electric Parking Brake logic.
F3	20A	Yellow	Keyless vehicle module.
F4	20A	Yellow	Climate seats.
F5	5A	Tan	Instrument panel logic.
F6	15A	Blue	Air conditioning.

Fuse No	Rating (amps)	Fuse Colour	Circuit
F7	5A	Tan	Passive Anti-Theft System (PATS) transmitter/receiver.
F8	5A	Tan	Foot brake switch.
F9	5A	Tan	Passenger seat memory switch, Passenger seat module, Sunload sensor.
F10	15A	Blue	Instrument panel (column adjust).
F11	-	-	-
F12	10A	Red	Interior lamp switched power comprises - map, courtesy, footwell, sun visor, glove box. In-car aspirator.
F13	-	-	-
F14	15A	Blue	Adaptive dynamic ride control power.
F15	-	-	-
F16	15A	Blue	Front power point, premium audio amplifier, cooling fan.
F17	5A	Tan	OBD II.
F18	5A	Tan	Driver's seat module, Singapore Road Pricing, Driver's seat memory, Driver's window and mirror switchpack.
F19	5A	Tan	RF receiver.
F20	-	-	-
F21	-	-	-
F22	-	-	-
F23	10A	Red	Cabin accessory power.
F24	-	-	-
F25	-	-	-
F26	-	-	-
F27	-	-	-
F28	30A	Green	Passenger seat motor (2).
F29	30A	Green	Passenger seat motor (1).
F30	30A	Green	Driver's seat module (1).
F31	-	-	-
F32	30A	Green	Driver's seat module (2).
F33	-	-	-
F34	-	-	-
F35	-	-	-