

## METRIC/IMPERIAL/MIXED DISPLAY

The display of metric, imperial or mixed units is selected via the touch screen:

- With the touch screen switched on, select **Vehicle** from the **Home** menu.
- Select **Units**, then **Preferences**.
- Touch the appropriate button to select Metric or Imperial units.

**Note:** Temperature display can be changed between **°C** (Celsius) and **°F** (Fahrenheit) independently of Metric or Imperial units.

## SERVICE INTERVAL INDICATOR

The service interval message will only be displayed when the vehicle has less than 3200 km (2000 miles) before the service is due.

When the ignition is switched on, and the vehicle has started its service countdown, **SERVICE REQ'D XXXX km (XXXX MLS)** is displayed in the message centre.

When the service distance has been reached, **SERVICE REQUIRED** is displayed in the message centre.

 If no service interval indicator is displayed during the vehicle service cycle, make sure that your vehicle is serviced in accordance with the intervals, as stated in the Service Portfolio.