



SJ1740

1. Indicates that a CD is loaded.
2. Indicates that a CD is playing.
3. Indicates that no CD is loaded.

#### Loading a single CD:

- Load the CD into the loading slot. The CD will load and then start to play.

#### Loading multiple CDs:

- Press the **LOAD** button and follow the instructions on the pop-up.

## MP3 FILE PLAYBACK

If an MP3 CD is to be used, each session must be properly closed but the whole disc does not have to be finalised.

When **Folders** (11) is selected, the list of folders and MP3 files is displayed. Select a folder to view and select the tracks contained within.

- The highest compression rate supported is 320k bits per second (kbps). If anything less than 128 kbps is used, Digital Signal Processing (DSP) functionality may be lost.
- The CD player may take a longer time to load an MP3 disc if there are more tracks than on a normal CD. To minimise loading time, a rigid folder structure is recommended.
- If a CD contains a mixture of MP3 and CDDA tracks, any MP3 tracks will be ignored.