


# Heating and ventilation

## CLIMATE CONTROL

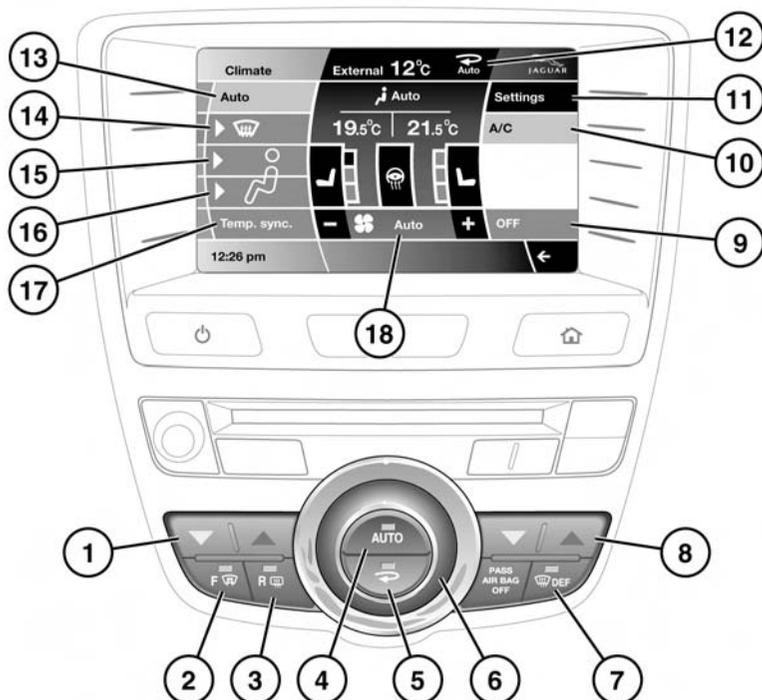

SJ1688

To access the Climate menu on the touch screen, select **Climate** from the **Home** menu, see **50, TOUCH SCREEN HOME MENU**.

1. Left-hand temperature control: Press the blue or red arrows to adjust the temperature for the left side of the vehicle. The temperature is displayed on the touch screen (**HI** or **LO** is displayed when the maximum or minimum setting is selected).

**Note:** The maximum possible temperature differential between left and right hand temperature settings is 3°C (5.4°F).

2. Front screen heater, see **55, HEATED SCREENS**.

3. Rear screen heater, see **55, HEATED SCREENS**.
4. Press to turn on **AUTO** climate control, see **55, AUTOMATIC CLIMATE CONTROL**.
5. Air recirculation, see **55, RECIRCULATION**.
6. Blower speed rotary control.
7. Press to defrost and demist the windscreen. When selected the blower switches on at high speed but can be adjusted manually.

The front and rear screen heaters and door mirror heaters switch on automatically (if the engine is running).

If selected recirculation is cancelled.