

8. Right-hand temperature control: Press the blue or red arrows to adjust the temperature for the right side of the vehicle. The temperature is displayed on the touch screen (**HI** or **LO** is displayed when the maximum or minimum setting is selected).
9. Touch to switch climate control on or off.
10. Air conditioning on/off. When the air conditioning is turned off, Economy mode is selected, which reduces the power consumed by the climate system.
Note: Prolonged use of Economy mode may cause the windows to mist.
11. **Settings** menu, select to adjust personal climate zone settings, also access to the automatic air recirculation sensor control setting.
12. Recirculation symbol, see **55**, **RECIRCULATION**
13. Touch to select **AUTO** mode, see **55**, **AUTOMATIC CLIMATE CONTROL**.
14. Touch to select air distribution to the windscreen.
15. Touch to select air distribution to the face.
16. Touch to select air distribution to the feet.
17. Touch to synchronize the left and right-hand side climate control zones.
18. Blower speed: Touch + or - symbols to increase or decrease the blower speed.
Blower speed is automatically set in **AUTO** mode. Adjusting the blower speed will cancel **AUTO** mode.

In addition to the selectable controls, the climate menu displays symbols that indicate the status of heating and ventilation functions.

*Note: If the climate control system is switched off, pressing an **AUTO** button (4 or 13) or the Defrost button (7), will switch the climate system on.*

AUTOMATIC CLIMATE CONTROL

AUTO mode should be used as the normal operating mode. The air conditioning, heating and ventilation controls automatically provide an optimum environment at the selected temperature.

*Note: Screen heating may be selected in **AUTO** mode. Any other manual adjustment cancels **AUTO** operation.*

Note: Water expelled by the air conditioning may collect underneath the vehicle when parked. This is not a cause for concern.

HEATED SCREENS

With the engine running, the front (**F**) and rear (**R**) screen heaters, may be switched on and off in any mode, including with the climate control system off.

The front and rear screen heaters switch off automatically after a timed period depending on the ambient temperature. In cold ambient conditions, (the front screen below 5°C (41°F) and rear below -1°C (30°F)), the screen heaters will switch on automatically when the engine is started.

RECIRCULATION

Press the air recirculation switch (**5**). Selection is indicated by a screen symbol (**12**) and the button indicator illuminates.

When selected, the air is recirculated inside the vehicle. This helps to maintain a high or low temperature, and is useful for preventing fumes from entering the vehicle.

Note: Prolonged use at low temperatures may cause the windows to mist.