

ARDUOUS DRIVING CONDITIONS

When a vehicle is operated in severe or arduous conditions, more frequent attention must be paid to servicing requirements. Refer to your Service Portfolio for details or contact your Dealer/Authorised Repairer for advice.

SAFETY IN THE GARAGE

- ⚠️ WARNING - THAT NO PERSON SHOULD PLACE ANY PORTION OF THEIR BODY UNDER A VEHICLE THAT IS SUPPORTED BY A JACK.**
- ⚠️ If the vehicle has been driven recently, do not touch exhaust and cooling system components until the engine has cooled.**
- ⚠️ Never leave the engine running in an unventilated area.**
- ⚠️ Keep your hands and clothing away from drive belts, pulleys and fans. Some fans may continue to operate after the engine has stopped.**
- ⚠️ Remove metal wrist bands and jewellery, before working in the engine compartment.**
- ⚠️ Do not touch electrical leads or components while the engine is running, or with the starter switch turned on.**
- ⚠️ Do not allow tools or metal parts of the vehicle to make contact with the battery leads or terminals.**

FUEL SYSTEM

- ⚠️ Under no circumstances should any part of the fuel system be dismantled or replaced by anyone other than a suitably qualified vehicle technician.**

⚠️ Ensure sparks and naked lights are kept away from the engine compartment.

⚠️ Wear protective clothing, including, where practicable, gloves made from an impervious material.

USED ENGINE OIL

⚠️ Prolonged contact with engine oil may cause serious skin disorders, including dermatitis and cancer of the skin. Always wash thoroughly after contact.

UNBLOCKING WASHER JETS

⚠️ Do not operate the washer jets during adjustment. Windscreen washer fluid may cause irritation to the eyes and skin. Always read and observe the washer fluid manufacturers instructions.

If a washer jet becomes blocked, use a thin strand of wire to unblock the jet by inserting the wire into the jet. Ensure that the wire is completely removed after unblocking.

LAMP FAILURE

Headlamp unit:

⚠️ The headlamps are Xenon High Illumination Density (HID) units. Replacement or maintenance of Xenon lamps should only be carried out by qualified personnel.

⚠️ High voltage is required to ignite the Xenon lamps.

⚠️ Xenon lamp units operate at a very high temperature. Ensure that the lamp units have cooled before attempting to touch them.