

# Fuel and refuelling

4. Stow the cap on the lip provided on the top of the hinge arm, as shown.
5. Insert the dispenser nozzle into the filler neck sufficiently to open the trap door, for fuel to flow into the fuel tank. When the tank is full the filler nozzle automatically shuts off. Filling beyond this point could result in fuel spillage.

When replacing the cap, turn it clockwise until the ratchet clicks. Failure to do so may cause the Engine malfunction warning lamp to illuminate. If the warning lamp illuminates, ensure the cap is fitted properly.

Close the flap, which automatically locks.

## FUEL TANK CAPACITY

Avoid the risk of running out of fuel and never intentionally drive the vehicle when the fuel gauge indicates that the tank is empty. When refuelling your vehicle after the fuel gauge reads empty, you may not be able to add the fuel quantity shown below, as there will be a small reserve remaining in the tank.

Total tank capacity (usable):	
All vehicles	71 litres (15.6 gallons)
Fill capacity (when fuel gauge reads empty)	65.1 litres (14.3 gallons)
Reserve capacity (when fuel gauge reads empty)	6.0 litres (1.3 gallons)

## FUEL SPECIFICATION

Minimum	91 RON
Recommended	95 - 98 RON