

# Telephone

## CALL VOLUME

The phone call volume is operated by the audio system's volume control.

If the audio system is in use when a phone call is active, the audio system source is suppressed for the duration of the call.

## DIALLING

Once your phone is connected to the vehicle's system, Digit Dial is the default screen in Phone mode.

Using the on-screen keypad, enter the required number and touch the connect icon to send.

**Note:** When entering a number, you can change the phone number shown on the touch screen using the **C** button. A momentary touch erases a single digit, a long touch erases the complete number.

## LAST 10 OPTION

Allows view of the last 10 calls made, received or missed.

**Note:** The vehicle will display the list in the order the calls were recorded. If this information is not available, they will be displayed as they are sent from the mobile phone. Some phones may arrange the list in reverse or other order.

## PHONEBOOK

Contacts stored in the memory of a paired phone can be automatically or manually downloaded to the vehicle's phonebook each time the phone is connected to the system. See **109, SETTINGS**.

Certain mobile phones store the phonebook in two different areas, the SIM card and the phone memory. The vehicle system will access only those numbers stored in the phone memory.

To access contacts from the phonebook, touch the **Names** soft key on the Digit Dial menu, see **108, TELEPHONE SYSTEM OVERVIEW**.

If your phone supports contact type data, you will be able to see a contact type icon in the vehicle's phonebook directory. These can be seen on the right-hand side of each contact in the directory and will indicate one of the following types:



Car.



Mobile.



Home.



Work.