

For example, if you select **10** under **Page jump**, then 10 x 4 (40) items will scroll past each time you select a page scroll button.

## 7. Folders:

### USB mode:

- Select to view the folder list on the device.
- Select the folder name to display the tracks in that folder.
- Select a track to start playback of that track. Play will continue through the remainder of the tracks in the folder.

### iPod mode.

- Select to display all search methods on the iPod.

## 8. Repeat:

In **USB** or **iPod** mode.

- Briefly touch to repeat the current track.
- Touch and hold (2 seconds) to repeat all tracks in the current folder.
- Touch **Repeat** again to cancel and return to normal play back.

## 9. iPod:

Touch to select the iPod device when both a USB and iPod device are both connected.


## 10. Mix:

- Briefly touch to play random tracks from the USB folder or iPod playlist. A **Mix folder** message is displayed.
- Touch and hold (2 seconds) to play all tracks from the USB folders or iPod playlist in a random sequence. **Mix all** is displayed.
- Touch and release again to cancel **Mix** mode.

**11. USB:** Touch to select the USB device when both a USB and iPod device are both connected.

**12. Pause/Play:** Select to pause playback. Select again to resume playback.

## CONNECTING MULTIPLE DEVICES

 Do not plug non-audio devices into the USB port.

You can connect multiple devices simultaneously to the portable media interface and switch between them using the touch screen. Select **iPod (9)** or **USB (11)**, to switch between modes.

The device docked first will remain the active device until you choose to change.

If, after changing to the newly-docked device, you change back to the first device, play will resume at the point you left it (USB and iPod only).

**Note:** You cannot use a USB hub to connect more than one USB device to the audio unit.

**Note:** Devices connected to the iPod and USB ports will be charged, but devices that are fully discharged will not play.

**Note:** Options such as **Repeat** and **Shuffle** relate to the device currently playing, they will not apply to any subsequent device.