

# Exiting the vehicle

If one or more of the doors fails to lock properly when a lock attempt is made using the Jaguar Smart Key, two warning tones will sound and one or more of the doors may not be locked.

## GLOBAL CLOSING

 **Ensure that no children, pets, or obstructions are in any open aperture before operating global closing.**

Ensure that all doors are closed, then press and hold the lock button on the Smart Key for 3 seconds or press and hold the lock button on the exterior door handle. The vehicle will single lock and the alarm will be fully armed immediately. After 3 seconds all of the windows will close.

**Note:** If the button on the door handle is released before the windows have fully closed, the windows will stop closing.

**Note:** Global closing can be enabled/disabled via the Security/ vehicle settings menu on the touch screen. See **52, VEHICLE SETTINGS**.

## KEYLESS LOCKING

 Remove all Jaguar Smart Keys and emergency key blades from the vehicle when it is left unattended. This will help prevent the alarm being disarmed and therefore help prevent theft.

 The Smart Key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including laptop bag), games console etc.

The vehicle will not lock automatically.

To single-lock the vehicle, press the button on the door handle once. The hazard warning lamps will flash once as confirmation (in some markets, an audible warning will sound).

To double-lock the vehicle, press the button twice within 3 seconds. The hazard warning lamps will flash twice (with a long second flash). In some markets, a double audible warning will sound.

**Note:** Keyless locking will only activate if all doors, bonnet and the luggage compartment are closed and the Jaguar Smart Key is outside the vehicle. If the above conditions are not met, two audible error warnings will sound.

## FULL ALARM

To set full alarm protection, ensure that all the windows are closed. Then, on vehicles fitted with double-locking, press the lock button twice within 3 seconds. The hazard warning lights will flash twice to confirm the alarm state and, in some markets, an audible tone will sound.

**Note:** If the alarm is armed and a window is left open, the alarm may sound due to movement of air currents, detected by the intrusion sensors in the front interior light console.

**Note:** The intrusion sensors can be temporarily disabled, for the next time the vehicle is locked, via the Security/ vehicle settings menu on the touch screen. See **52, VEHICLE SETTINGS**.

## PERIMETER ALARM

To set perimeter alarm protection, briefly press the lock button once. The hazard warning lights will flash once to confirm the alarm state.

## BATTERY-BACKED SOUNDER

In certain markets, a separate battery backed sounder is fitted. This device will sound the alarm if the vehicle battery or the alarm sounder is disconnected when the security system is armed.