

# Touch screen

For further adjustment use the + and - buttons next to **Brightness** and **Contrast** on the **Cont./Bright** screen.

**Note:** The brightness of the touch-screen and instrument panel can also be controlled by the instrument panel dimmer switch, see 202, **DRIVER CONTROLS**.

- **Syst. settings:** See 52, **SYSTEM SETTINGS**.
- **Veh. settings:** See 52, **VEHICLE SETTINGS**.

## SYSTEM SETTINGS

Selecting **Syst. settings** on the **Vehicle** menu screen gives access to the following:

- **Display set:** On this screen you can select the screensaver to be displayed. Also the Timeout to home menu screen (return to display the **Home** menu) can be adjusted. Select **Off** or **On** next to **Timeout to home screen**. Using the adjustment bar, the timeout can be adjusted from 10 seconds to 5 minutes.

**Note:** A default setting of 1 minute is set if no time adjustment is made.

- **Preferences:** The language, distance units and temperature display can be set.
- **Button audio:** Use to change **Feed back on button press**. Select **Off** or **On** for both **Audible** or **Voice**.
- **Vol. presets:** Use to adjust the volume for **Park aid**, **Navigation** and **Phone**.

The **AVC** (automatic volume control) can be set to **Low**, **Medium** or **High**.

## VEHICLE SETTINGS

Selecting **Veh.** settings on the **Vehicle** menu screen gives access to the following:

- **Security:** Select to enable/disable or alter the settings of the following:
  - Drive away locking**, select **Off** or **On**. Also the **Speed** can be set (8, 16 or 32 km/h or 5, 10 or 20 mph).
  - 2 stage locking, Passive arming, Auto-relock and arm** and **Alarm sensors** can be switched **Off** or **On**.
  - Window global open/close** can be switched **Off** or **On**.
  - Mirror fold back and Reverse mirror dip** can be switched **Off** or **On**.
- **Parking:** Select to enable/disable **Reverse mirror dip**.
- **Valet mode:** see 52, **SELECTING VALET MODE**.

## SELECTING VALET MODE

Valet mode allows the vehicle to be locked by a parking attendant, without giving access to the luggage compartment and glove box. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

From the **Home** menu, select **Valet** (or see 52, **VEHICLE SETTINGS**) then enter a four digit Personal Identification Number (PIN) (personally chosen). On completion, touch the **OK** soft key.

If you wish to cancel the PIN, touch the **C** soft key. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.

Once the PIN has been correctly entered, a security information pop-up is displayed. Read the information and remove the emergency key from the Smart Key, then select **OK**.