


## TELEPHONE SYSTEM OVERVIEW

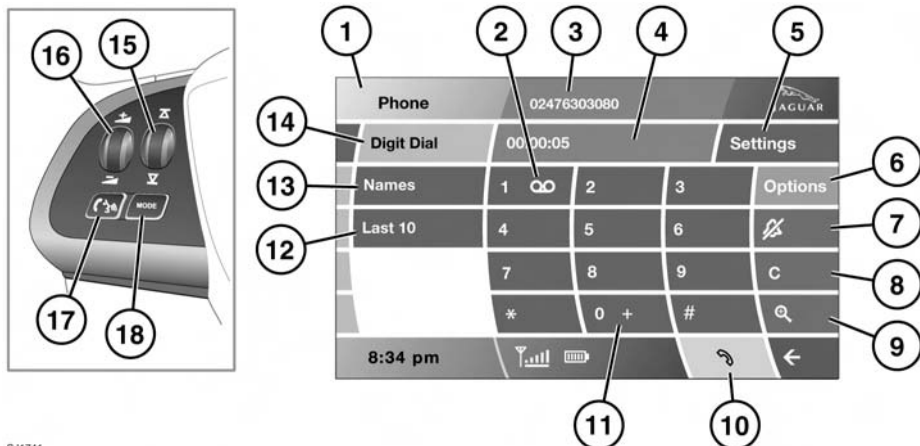

SJ1741

**!** In the interest of safety, only operate, adjust or view the system when it is safe to do so.

**Note:** Using the hands-free steering wheel controls is the preferred method of adjustment, as driver distraction is minimised.

1. Digit Dial screen.
2. Touch and hold to retrieve your Voice mail.
3. Status display: Displays the number dialled etc.
4. Information display.
5. **Settings**, see **109, SETTINGS**.
6. **Options**: Touch to select up to 4 ring tones or to use your own mobile phone ring tone.
7. **Mute microphone**: Touch to initiate Privacy mode. While selected, the caller will not hear you talking.
8. **C** button: When typing a phone number, a brief touch deletes a single digit or a long touch clears the whole number.
9. Touch to magnify the keypad.
10. **Call Connect/Disconnect**: Touch to send/accept or end/reject a call.
11. Keypad.
12. **Last 10**: Touch to access the last 10 dialled, received and missed calls.
13. **Names**: Touch to access the downloaded phonebook search screen.
  - Select the first letter of the contact name (continually touch until the correct letter is shown).
  - Touch **OK** to access list of names in the phonebook directory.
  - Select the desired name to make a call.
14. **Digit Dial**: Touch to access Digit Dial mode.
15. **Scroll control**: Turn to scroll up/down lists of calls or phonebook entries.
16. **Volume control**: Turn to increase/decrease call volume.
17. **Call button**: Briefly press to initiate or end a call.
18. **MODE**: Press and hold to access phone mode on the touch-screen and message centre.