


TOUCH SCREEN HOME MENU

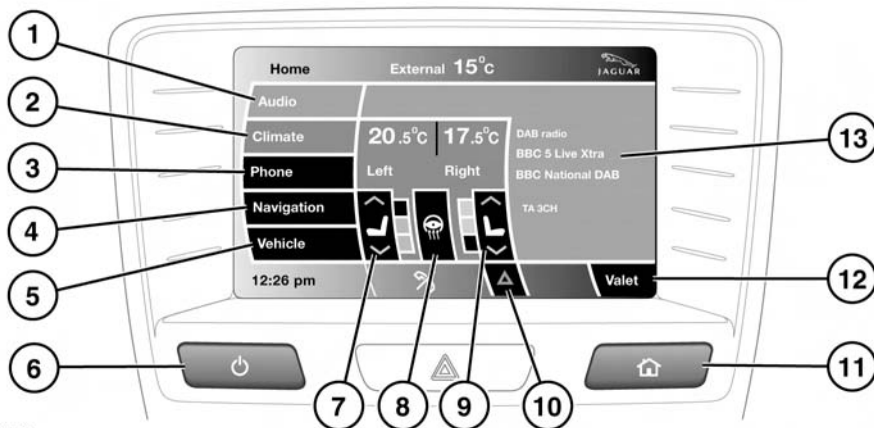

SJ1687

⚠ In the interest of safety, only operate, adjust or view the system when it is safe to do so.

1. Touch to view the **Audio** menu. See **91, AUDIO CONTROLS**.
2. Touch to view the touch screen **Climate** menu. Internal front left and right temperature settings and external temperature are also shown on the **Home** menu. See **54, CLIMATE CONTROL**.
3. Touch to view the **Phone** menu. See **108, TELEPHONE SYSTEM OVERVIEW**.
4. Touch to select the **Navigation** menu. See **113, NAVIGATION SETUP**.
5. Touch to select the **Vehicle** menu, the following functions can be set: Trip computer, Clock, Contrast and brightness (Cont./Bright), System settings (Syst. settings) and Vehicle settings (Veh. settings). See **51, VEHICLE MENU**.
6. Press to turn the touch screen on or off.
7. Left hand side heated or climate seat controls, see **56, HEATED SEATS** or **56, CLIMATE SEATS**.
8. Touch to turn the heated steering wheel on (red icon) or off.
9. Right hand side heated or climate seat controls, see **56, HEATED SEATS** or **56, CLIMATE SEATS**.
10. Warning message icon. See **47, WARNING AND INFORMATION MESSAGES**.
11. Press to return the touch screen to the Home menu.
12. Touch to select **Valet** mode.
Note: To enter/exit Valet mode, the correct PIN will need to be entered. See **52, SELECTING VALET MODE**.
13. An overview of current audio information.
Note: When the engine is stopped, the touch-screen reverts to stand-by mode. To activate the touch-screen press the **START/STOP** button again.