
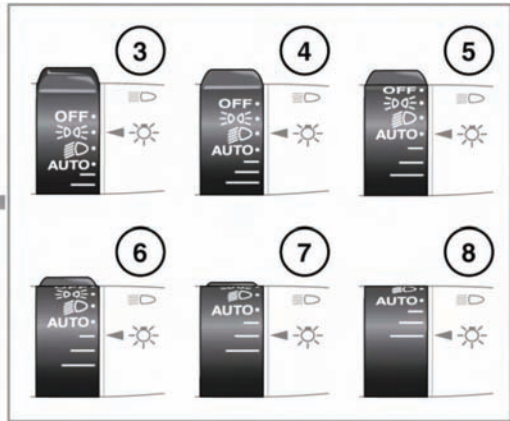


# Exterior lights

## LIGHTING CONTROL

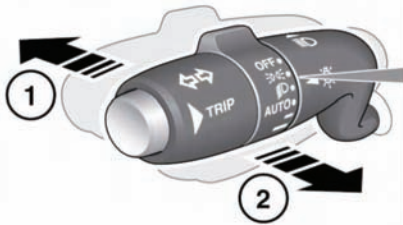

E132401

1. With the headlamps on, push the switch away from the steering wheel to select high beam. The blue warning indicator on the instrument panel will illuminate.
2. Pull the switch towards the steering wheel and release to flash the high beam. The high beam will remain on for as long as the switch is held.
3. Side lamps.
4. Headlamps.

**Note:** If the rotary control is moved to the **OFF** position with high beam selected, high beam will illuminate when the headlamps are turned on again.

5. Autolamps (AUTO). With the ignition on, if ambient light fades the side lamps and headlamps will switch on automatically. If ambient light then increases, the side lamps and headlamps automatically go off.

**Note:** A light sensor on the front of the fascia monitors ambient light levels for autolamps operation. Keep the windshield clean and ensure the sensor is not obscured. Obstructing the light in this area may lead to unwanted autolamps operation.

6. Exit delay of 30 seconds.
7. Exit delay of 60 seconds.
8. Exit delay of 120 seconds.

**Note:** Press the headlamp button on the Jaguar Smart Key to switch off the headlamps during an exit delay period.

## DIRECTION INDICATORS

In addition to normal operation, the indicators will operate 3 times (e.g. to indicate a lane change) if the stalk is briefly pushed up or down.

## DAYLIGHT RUNNING LAMPS

With the rotary control in the **OFF** or **AUTO** position, the front daylight running lamps will switch on automatically with the following conditions:

- The ignition is on.
- The engine is running.
- The gear selector is in **D** (Drive) or **R** (Reverse) - market dependent.

***Note:** The lamps remain on if the gear selector is subsequently moved to **N** (Neutral)*

- The parking brake is not applied (is released) - market dependent.

## APPROACH LAMPS

The headlamps can be illuminated remotely for a programed length of time, by pressing the headlamp button on the Jaguar Smart key. See **8, UNLOCKING THE VEHICLE**. Press the button again to switch off.

***Note:** In some markets, a second press will illuminate the reverse lamps and a third press is required to turn the lamps off.*

## ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

These lamps broaden the beam of the headlamps when cornering in different circumstances.

**Static bending lamps:** The static bending lamps operate when necessary, to provide an even broader light spread.

**Cornering lamps:** At speeds up to 25 mph (40 km/h), to provide improved visibility at junctions, the system switches on the lamp if it has received an input from the vehicle's direction indicator. Only the lamp on the same side as the operating indicator illuminates. The lamp will self cancel after 3 minutes of continuous operation.

## WINDSHIELD WIPER DETECTION

This function only operates when autolamps is selected. The side lamps, tail lamps and headlamps will switch on automatically if the windshield wipers are switched on for 20 seconds or more. Once the windshield wipers are switched off, the side lamps, tail lamps and headlamps will automatically switch off 4 minutes later.

## HEADLAMPS - CONDENSATION

In certain circumstances, fogging may occur on the inside of a lamp lens. This is caused by natural changes in environmental conditions. This fogging is not detrimental to lamp performance and will clear during normal usage.