


FUSE BOX LOCATIONS

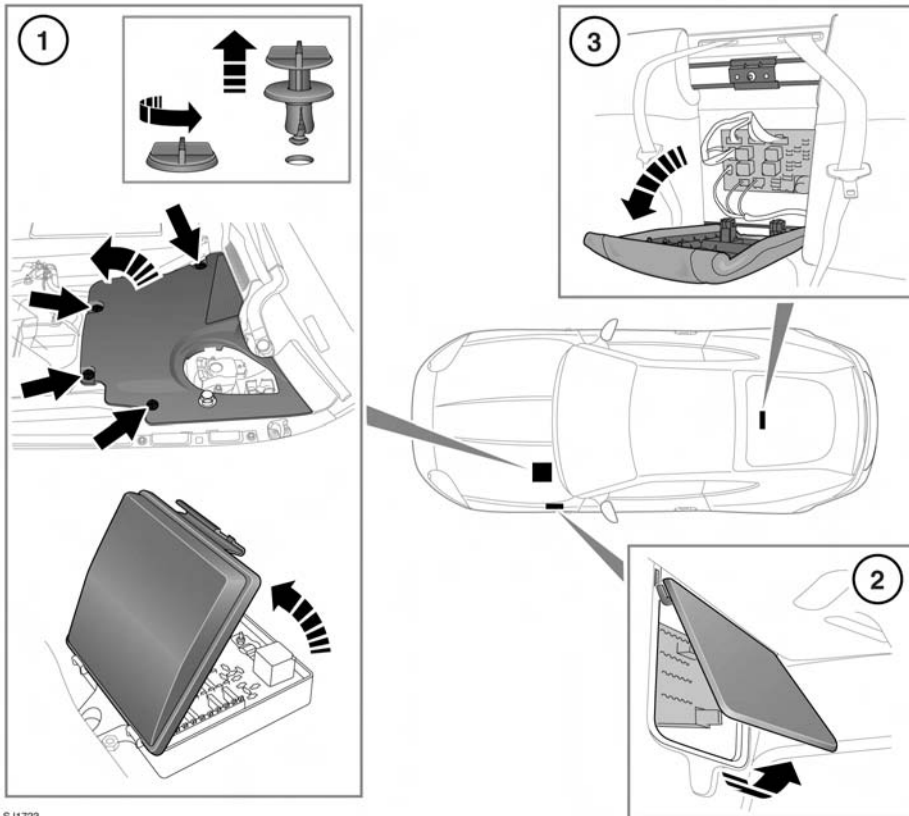

SJ1723

NOTICE

When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.

There are three separate fuse boxes fitted to the vehicle, each one containing fuses protecting a different group of circuits.

1. The engine compartment fuse box.
 - Release the turnbuckles and remove engine cover.
 - Press the release catches and remove fuse box cover.
2. The passenger compartment fuse box.
 - Remove the side trim panel.

3. The rear seat compartment fuse box.
 - Remove the rear seat center section, grasp the sides of the section and pull sharply.
 - When refitting the rear seat center section, ensure that the locating/securing pegs are aligned with their respective holes before pushing the section fully home.

CHANGING A FUSE

NOTICE

Always turn off the ignition system and the affected electrical circuit, before replacing a fuse.

NOTICE

Fit Jaguar approved replacement fuses of the same rating and type, or fuses of matching specification.

NOTICE

If the replacement fuse blows after installation, the system should be checked by your Dealer/Authorized Repairer.

Note: *Jaguar recommend that owners do not remove or replace relays. It is recommended that you seek qualified assistance in the event of a relay failure.*

Spare fuses and a fuse removal tool, are located in the rear seat compartment fuse box.

ENGINE COMPARTMENT FUSE BOX

Fuse No	Rating (amps)	Fuse color	Circuit
F1	-	-	-
F2	5A	Tan	Adaptive front lighting system - LH.
F3	5A	Tan	DSC ECU.
F4	30A	Green	Powerwash pump.
F5	-	-	-
F6	5A	Tan	Adaptive cruise control.
F7	40A	Orange	Front left screen heater.
F8	-	-	-
F9	15A	Blue	Cigar lighter.
F10	15A	Blue	Horn.
F11	-	-	-
F12	10A	Red	Cluster VAPS.
F13	5A	Tan	Adaptive front lighting system - RH.
F14	15A	Blue	Ignition coils.
F15	-	-	-
F16	-	-	-
F17	15A	Blue	ECM, TCM memory.
F18	20A	Yellow	EMS main, EMS secondary control.
F19	30A	Green	Starter.
F20	40A	Orange	DSC pump.
F21	-	-	-
F22	20A	Yellow	DSC valves.
F23	-	-	-
F24	15A	Blue	Intercooler water pump (Supercharged engines only).
F25	-	-	-
F26	40A	Orange	Wiper motor.
F27	-	-	-
F28	15A	Blue	VVT diode.
F29	5A	Tan	Oil temperature.
F30	10A	Red	Throttle motor.
F31	10A	Red	Radiator fan, ECM cooling fan.

Fuse No	Rating (amps)	Fuse color	Circuit
F32	40A	Orange	Front right screen heater.
F33	20A	Yellow	UHEGO - A bank heaters.
F34	15A	Blue	UHEGO - B bank heaters.
F35	80A	Black	Radiator fan - Normally aspirated engines.
	100A	Black	Radiator fan - Supercharged engines.

PASSENGER COMPARTMENT FUSE BOX

Fuse No	Rating (amps)	Fuse color	Circuit
F1	25A	Clear	Passenger door zone ECM.
F2	5A	Tan	Tire Pressure Monitoring System.
F3	-	-	-
F4	-	-	-
F5	-	-	-
F6	-	-	-
F7	-	-	-
F8	5A	Tan	Power roof logic.
F9	-	-	-
F10	10A	Red	Accessory connector B+.
F11	-	-	-
F12	-	-	-
F13	25A	Clear	Driver's door zone ECM, OBD2.
F14	10A	Red	Navigation, VICS, power.
F15	-	-	-
F16	-	-	-
F17	10A	Red	Restraints control module, Instrument pack, Occupancy classification sensor.
F18	30A	Green	Electric Parking Brake (EPB).
F19	10A	Red	Supercharged active exhaust.
F20	-	-	-
F21	15A	Blue	IHU, supply (IAV, ICM, ICP).
F22	5A	Tan	Phone, VEMS, power.

Fuses

Fuse No	Rating (amps)	Fuse color	Circuit
F23	30A	Green	Heated rear screen.
F24	10A	Red	AUU.
F25	10A	Red	DVD, power.
F26	-	-	-
F27	10A	Red	Pedestrian impact sensor.
F28	40A	Orange	E-Diff.
F29	-	-	-
F30	40A	Orange	Power roof rear quarters.
F31	30A	Green	Power Amp supply.
F32	40A	Orange	Power roof supply.
F33	30A	Green	Fuel pump module.
F34	40A	Orange	Blower motor.

REAR SEAT COMPARTMENT FUSE BOX

Fuse No	Rating (amps)	Fuse color	Circuit
F1	20A	Yellow	Climate seats.
F2	10A	Red	ETS, Electric Parking Brake logic.
F3	20A	Yellow	Keyless vehicle module.
F4	20A	Yellow	Climate seats.
F5	5A	Tan	Instrument panel logic.
F6	15A	Blue	Air conditioning.
F7	5A	Tan	Passive Anti-Theft System (PATS) transmitter/receiver.
F8	5A	Tan	Foot brake switch.
F9	5A	Tan	Passenger seat memory switch, Passenger seat module, Sunload sensor.
F10	15A	Blue	Instrument panel (column adjust).
F11	-	-	-
F12	10A	Red	Interior lamp switched power comprises - map, courtesy, footwell, sun visor, glove box. In-car aspirator.
F13	-	-	-
F14	15A	Blue	Adaptive dynamic ride control power.
F15	-	-	-

Fuse No	Rating (amps)	Fuse color	Circuit
F16	15A	Blue	Front power point, premium audio amplifier, cooling fan.
F17	5A	Tan	OBD II.
F18	5A	Tan	Driver's seat module, Singapore Road Pricing, Driver's seat memory, Driver's window and mirror switchpack.
F19	5A	Tan	RF receiver.
F20	-	-	-
F21	-	-	-
F22	-	-	-
F23	10A	Red	Cabin accessory power.
F24	-	-	-
F25	-	-	-
F26	-	-	-
F27	-	-	-
F28	30A	Green	Passenger seat motor (2).
F29	30A	Green	Passenger seat motor (1).
F30	30A	Green	Driver's seat module (1).
F31	-	-	-
F32	30A	Green	Driver's seat module (2).
F33	-	-	-
F34	-	-	-
F35	-	-	-