


Wipers and washers

WIPER OPERATION

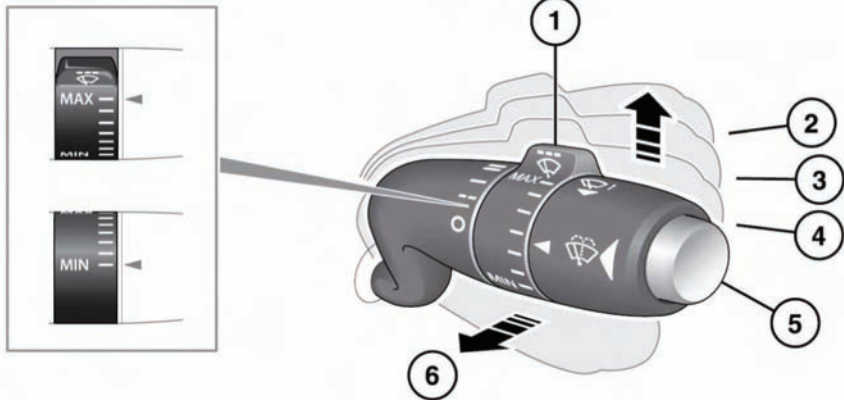

E132404

1. Rotate control to adjust sensitivity.
 - Rain sensor maximum sensitivity.
 - Rain sensor minimum sensitivity.
2. Fast speed wipe.
3. Normal speed wipe.
4. Rain sensor activated wipe (AUTO).
5. Windshield washer button.
6. Single wipe.

NOTICE

Do not operate the wipers on a dry windshield.

NOTICE

In freezing or very hot conditions, ensure that the wipers have not stuck to the windshield before operating.

NOTICE

Remove any snow, ice or frost from the windshield, around the wiper arms and blades, and the screen scuttle, before operating the wipers.

Note: *If the wiper blades become stuck or jammed, an electronic cut-out may temporarily halt wiper operation. If this happens, switch off the wipers and the ignition. Clear any obstructions and free the wiper blades, before attempting to switch on the ignition.*

SPEED-DEPENDENT MODE

If vehicle comes to a stop with the wipers operating, the wipers will switch to the next lowest speed. When vehicle speed increases to over 10 km/h (6 mph), the original wiper speed settings are restored.



This function can be configured by your Dealer/Authorized Repairer.

RAIN SENSOR

NOTICE

Ensure that the wipers are switched off before entering a car wash. If the rain sensitive wipers operate during the car washing process damage may occur to the wiper mechanism.

NOTICE

During frosty conditions ensure that **AUTO** is not selected before operating the ignition system as damage to the wiper blades can occur when the windshield is frozen.

The rain sensor is able to detect the presence and amount of rain, dirt or snow on the windshield and automatically activates the windshield wipers accordingly. Static droplets may not be detected on initial start-up, use a single wipe to clear the screen.

To activate the rain sensitive wipers, move the wiper stalk to the rain sensor position and adjust the rain sensor sensitivity control as required. When rain sensitive wipers are activated and when sensitivity is increased, a single wipe will operate.

Note: The rain sensor is located in the front of the interior mirror. Ensure that the windshield in front of the mirror is kept clean, as dirt may affect the operation of the sensor.

WINDSHIELD WASHERS

⚠ WARNING

Some windshield wash products are flammable, do not allow windshield wash to come into contact with sources of ignition.

NOTICE

Only windshield wash products which are approved for automotive use should be used, and then only in accordance with the manufacturer's instructions.

To operate the wash/wipe, press and release the button on the end of the wiper stalk. The wipers will perform five normal speed wipes, followed by a drip wipe (if configured). The washers will operate during the first two wipes.

If the washers are operated with the wipers operating at normal or fast speed, the washer jets will operate for two wipes and operation of the wipers will not be affected.

Note: If the button is pressed and held, the wipers and washers will operate at normal speed until the button is released (or for a maximum of 10 seconds).

After the button is released, the wipers will operate for a further three wipes, followed by a drip wipe (if configured).

TIMED JET FUNCTION

If the timed jet function is configured, the washer jets will only operate on the up stroke of the wipers.



This function can be enabled/disabled by your Dealer/Authorized Repairer.

DRIP WIPE

If the drip wipe function is configured, the wipers will operate four seconds after a wash/wipe cycle has finished, to clear any remaining drips from the windshield.



This function can be enabled/disabled by your Dealer/Authorized Repairer.

HEADLAMP WASHERS

Headlamp power wash operates automatically with the windshield wash, and will only operate if the headlamps are switched on and there is sufficient washer fluid in the reservoir.

Headlamp wash operates with every fourth operation of the windshield washers, provided that ten minutes have elapsed since the last operation of the headlamp washers.

Note: The power wash sequence is reset when the headlamps or the ignition are turned off.

Note: Headlamp power wash is inhibited when the low washer fluid warning is on.