


Entering the vehicle

UNLOCKING THE VEHICLE

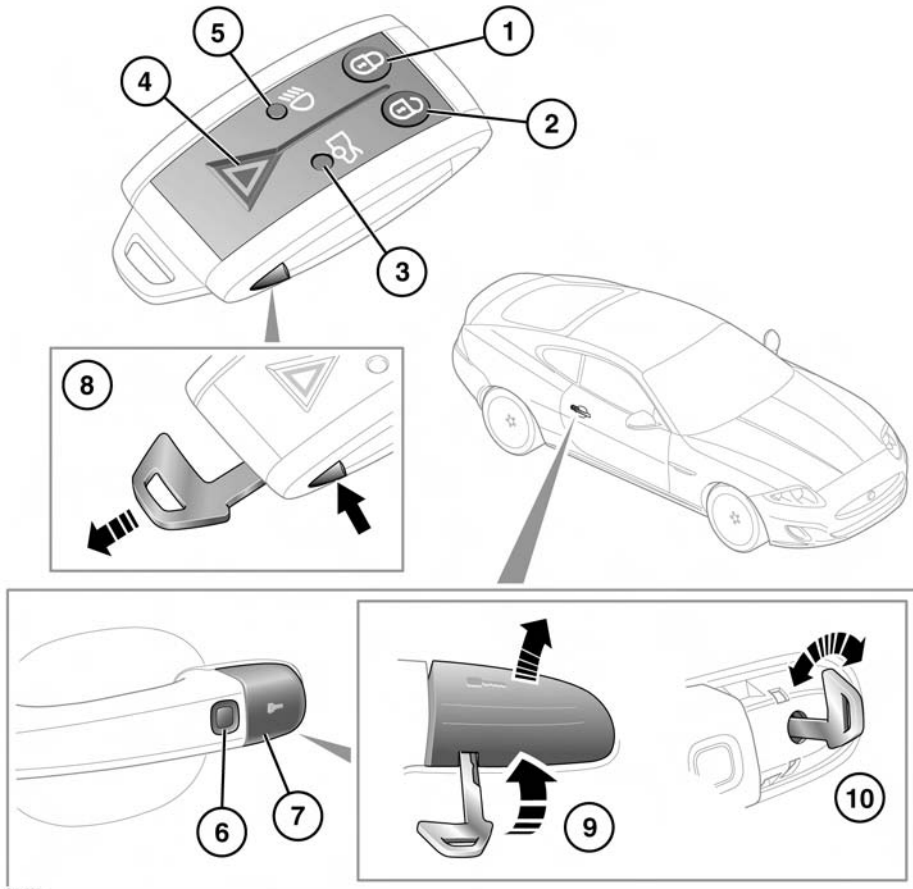

1. Press the lock button to secure the vehicle.
2. Your vehicle can be unlocked using either Single or Multi-point entry.

When single point entry is enabled the first press unlocks the driver's door and enables the other doors to be opened from the inside. The hazard warning lamps will flash twice, to indicate that the vehicle is unlocked and the alarm has been disarmed.

A second press unlocks the passenger door and the luggage compartment.

If multi-point entry is enabled, press briefly to unlock all the doors and luggage compartment and to disarm the alarm. The hazard warning lamps will flash twice to indicate that the vehicle is unlocked and the alarm has been disarmed.

To change from Single to Multi-point entry (or vice versa), press both the lock and unlock buttons simultaneously for 3 seconds. The hazard warning lamps will flash twice to confirm the change.

The change can also be achieved using the touch screen. See **60, VEHICLE MENU**.

3. Press to open the luggage compartment. The vehicle security system will remain active for the period the luggage compartment is open, but the intrusion and inclination sensing systems will be inhibited. Door and hood security will remain active.

The security system will re-arm to its previous state when the luggage compartment is closed.

4. Panic alarm: Press and hold for 3 seconds, or press 3 times within 3 seconds, to activate the horn, siren and hazard lamps. After 5 seconds, the alarm can be cancelled by pressing the button and holding for 3 seconds, or pressing 3 times within 3 seconds.

The emergency alarm will also be cancelled if the vehicle detects a valid Jaguar Smart Key when the START/STOP button is pressed.

5. Press to switch on the approach illumination for up to 120 seconds. The illumination time is set using the exit delay switch, see **38, LIGHTING CONTROL**. Pressing the button again or operating the starter button, will turn the approach lamps off.

6. Keyless locking button. See **13, KEYLESS LOCKING**.

7. Door lock cover.

8. Press and hold the emergency key release button, while pulling the emergency key from the Jaguar Smart Key body.

9. Insert the emergency key blade into the slot at the base of the door lock cover. Then gently lever the key blade upwards to lever the cover off the retaining clips.

10. Insert the key blade into the exposed lock to operate.

To lock: Ensure all the doors are closed, then turn the key blade towards the front of the vehicle and release. This will lock all doors but will not arm the alarm.

To unlock: Turn the key blade towards the rear of the vehicle and release. If the security system is disarmed, all doors and the luggage compartment will be unlocked. If the security system is armed, only the front left-hand door will unlock.

If the vehicle is unlocked using the emergency key blade with the security system armed, the alarm will sound when a door is unlocked. To deactivate the alarm, press the unlock button on the Jaguar Smart Key or press the engine START/STOP button with the Smart Key inside the vehicle.

Replacing the door lock cover:

1. Align the cover to engage the bottom 2 clips.
2. Push the top of the cover to engage the upper clip.

Entering the vehicle

KEYLESS ENTRY

⚠ WARNING

Any person fitted with an implanted medical device should ensure that the device is kept at a distance of at least 8.7 inches (22 cm) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and device. Interference may cause the implanted medical device to malfunction, causing serious injury or death.

For information concerning the locations of the security system transmitters, see 169, **REMOTE KEY FOB TRANSMITTER LOCATIONS**.

NOTICE

The Smart Key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including laptop bag), games console etc. Keep the Smart Key clear of such devices when attempting Keyless entry or Keyless starting.

Keyless entry allows the vehicle to be unlocked and disarmed by simply operating the door handle, provided the Jaguar Smart Key is within 1.0 m (3 feet).

The Smart Key needs only to be on the driver's person, it does not need to be exposed or handled. However, the Smart Key may not be detected if it is placed within a metallic container.

Note: *Keyless entry will unlock the vehicle in accordance with the current security setting (Single-point or Multi-point entry). However, if Single-point entry is the current setting and a door other than the driver's door is opened first, all doors will unlock.*

When all open doors have been closed, the system will search the vehicle interior for a valid Smart Key. If one is not detected, **SMART KEY NOT FOUND, PLEASE INSERT IN SLOT** will be displayed in the message center. Find the Smart Key and insert it into the starter control unit. See 78, **KEYLESS START BACKUP**.

CONVENIENCE MODE

When the door is opened using either the Jaguar Smart Key or keyless entry, the vehicle's electrical system initiates the convenience mode. The following systems become functional:

- Driver position memory.
- Seat and steering column adjustment.
- Interior and exterior lighting.
- Message center.
- Auxiliary power socket.

GLOBAL OPENING

Press and hold the unlock button on the Jaguar Smart Key for 3 seconds or press and hold the exterior lock button. The vehicle will unlock and the alarm will be disarmed immediately. After the 3 seconds all of the windows and sunroof will open.

To stop window movement during global opening when using the Smart Key, press any of the buttons on the Smart Key or operate the driver's window switch. To stop a particular window from opening, operate the relevant window switch.

To stop window movement when global opening using the exterior lock button, release the button.

Note: *Global opening can be enabled/disabled via the Vehicle settings menu on the touch screen. See 61, **VEHICLE SETTINGS**.*

DRIVE-AWAY LOCKING

Locks all the doors when the vehicle exceeds a set speed. One of three set speeds can be selected via the Security/ vehicle settings menu on the touch screen. See **61, VEHICLE SETTINGS**. Use of the central locking/ unlocking buttons (see **214, DRIVER CONTROLS**), will override the drive-away locking feature for the rest of a journey.

If a door is individually unlocked and opened, all doors will relock when the open door is subsequently closed.

Note: Drive-away locking can be enabled/ disabled via the Security/ vehicle settings menu on the touch screen. See **61, VEHICLE SETTINGS**.

REMOTE KEY FOB CARE

⚠ WARNING

To prevent accidental operation, never leave the Jaguar Smart Key in the vehicle if children or animals are also left in the vehicle.

NOTICE

Do not expose to extremes of heat, dust, humidity or fluids. Do not leave the transmitter exposed to direct sunlight.

The emergency key blade number is recorded on an attached label, which should be peeled off and affixed to the correct area on the Security Card, supplied in the literature pack. Keep the Security Card safe, but not in the vehicle.

The operational range of the Smart Key varies considerably, depending on atmospheric conditions and interference from other devices.

Note: The radio frequency used by the Smart Key may be used by other devices (e.g. medical equipment). This may prevent the Smart Key from operating correctly.

Entering the vehicle

REMOTE KEY FOB BATTERY REPLACEMENT

When the battery needs replacing, there will be a significant decrease in the effective range and the message **SMART KEY BATTERY LOW** is displayed in the message center.



SJ1762

To replace the battery:

1. Press the release button on the side of the Jaguar Smart Key and pull the key blade from the Smart Key.

2. Remove the two side covers, one at a time, by inserting a small flat-bladed screwdriver between the cover and body, then gently twist the screwdriver.
3. Insert the screwdriver between the two body halves and twist gently to separate.
4. Remove the printed circuit board, taking care not to touch the battery terminals.
5. Remove the old battery, then fit a new CR2032 type battery (available from your Dealer/Authorized Repairer), with the positive (+) side downwards.

Refit the parts in reverse order, ensuring they click securely into place.




Battery disposal: Used batteries must be disposed of correctly, as they contain harmful substances. Seek advice on disposal from your Dealer/Authorized Repairer and/or your local authority.

DOOR LOCK AND RELEASE LEVERS

⚠ WARNING

Park (P) should be engaged and the parking brake applied when the vehicle is stationary. The vehicle can move unexpectedly with any other gear position selected, which may result in death or serious injury.

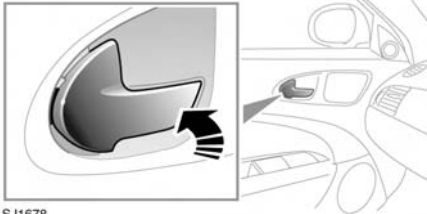

- Press the door release lever inwards to lock the door. If both doors are closed, operating the locking lever on either front door will lock both doors and the luggage compartment.
- Pull the release lever to unlock the door. If the doors were locked from inside and the alarm is disarmed, operating the locking lever on either front door will unlock both doors.

Note: If the car was locked using the Jaguar Smart Key, then operating the locking/release lever will only unlock/release that door and the alarm will sound.

- Pull the release lever to open the door.

MISLOCK

If one of the doors, the hood, or the luggage compartment are not shut fully when the vehicle is locked using the Jaguar Smart Key or by Keyless locking, the vehicle will not lock and two warning tones will sound. Check that all doors, the hood and the luggage compartment are closed properly and lock the vehicle again.

If one or more of the doors fails to lock properly when a lock attempt is made using the Jaguar Smart Key, two warning tones will sound and one or more of the doors may not be locked.

GLOBAL CLOSING

⚠ WARNING

Ensure that no children, pets, or obstructions are in any open aperture before operating global closing.

Ensure that all doors are closed, then press and hold the lock button on the Smart Key for 3 seconds or press and hold the lock button on the exterior door handle. The vehicle will lock and the alarm will be fully armed immediately. After 3 seconds all of the windows will close.

Note: If the button on the door handle is released before the windows have fully closed, the windows will stop closing.

Note: Global closing can be enabled/disabled via the Security/ vehicle settings menu on the touch screen. See **60, VEHICLE MENU**.

KEYLESS LOCKING

NOTICE

Remove all Jaguar Smart Keys and emergency key blades from the vehicle when it is left unattended. This will help prevent the alarm being disarmed and therefore help prevent theft.

NOTICE

The Smart Key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including laptop bag), games console etc.

The vehicle will not lock automatically.

Exiting the vehicle

To lock the vehicle, press the button on the door handle once. The hazard warning lamps will flash once as confirmation (in some markets, an audible warning will sound).

Note: *Keyless locking will only activate if all doors, hood and the luggage compartment are closed and the Jaguar Smart Key is outside the vehicle. If the above conditions are not met, two audible error warnings will sound.*

LOCK CONFIRMATION

If you are uncertain whether the vehicle is locked and armed, press the lock button again. The hazard warning lights will flash to indicate and confirm the current armed/disarmed status.

PERIMETER ALARM

To set perimeter alarm protection, briefly press the lock button once. The hazard warning lights will flash once to confirm the alarm state.

BATTERY-BACKED SOUNDER

In certain markets, a separate battery backed sounder is fitted. This device will sound the alarm if the vehicle battery or the alarm sounder is disconnected when the security system is armed.

DEACTIVATING THE ALARM WHEN TRIGGERED

If the alarm has been triggered, it can be deactivated by any one of the following methods:-

- Pressing the unlock button on the Jaguar Smart Key.
- Opening a door using keyless entry.
- Pressing the START/STOP button with a valid Jaguar Smart Key present.

TILT SENSOR

The tilt sensor detects any change in the vehicle's angle to the ground. When the alarm is armed and the vehicle locked, any change in the vehicle's angle will activate the tilt alarm.

Note: *The tilt sensor can be temporarily disabled, for the next time the vehicle is locked, via the Security/ vehicle settings menu on the touch screen. See 60, VEHICLE MENU.*

PASSIVE ARMING

This vehicle is fitted with a passive arming feature which can, if enabled, automatically arm the anti-theft system. Passive arming will automatically arm the perimeter alarm system 60 seconds after the driver's door is closed, provided all doors, hood and luggage compartment are closed, the ignition is switched off and there are no valid Jaguar Smart Keys inside the vehicle.

Passive arming will not lock the vehicle, although access to the luggage compartment via the interior or exterior release buttons will be prevented and the fuel filler flap will be locked.

AUTOMATIC RELOCKING AND RE-ARMING OF THE ALARM

Automatic relock and re-arm is a feature which, if enabled, automatically relocks the vehicle and arms the anti-theft system.

If the vehicle is in a locked and armed state and the remote unlock button is pressed, but none of the doors or the luggage compartment are opened within 1 minute, the vehicle will automatically relock all the doors and the luggage compartment and will re-arm the alarm system.

Note: *Automatic relocking and arming will only relock and arm to the last locked and armed state.*

SENSOR FAULTS

If the security systems detect a fault with one of the security sensors, two error tones will sound from the alarm after the vehicle is unlocked and disarmed. If this condition occurs, please visit your Dealer/Authorized Repairer for rectification.