


SATELLITE RADIO CONTROLS

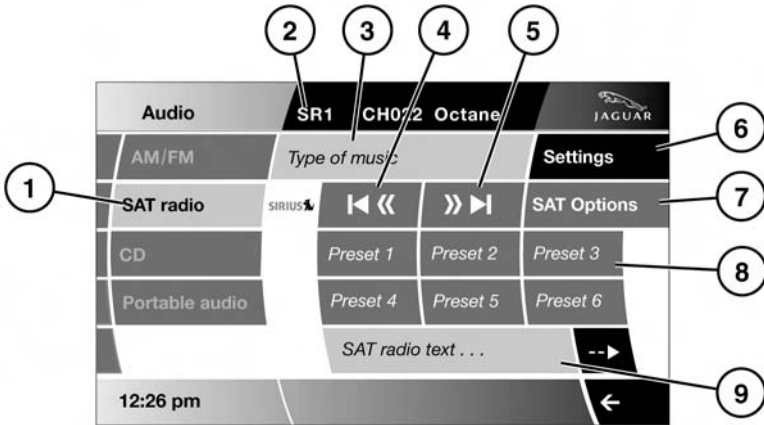

SJ1755

WARNING

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

- Satellite band selection:
 - Touch to select satellite radio.
 - Touch to cycle through the 3 screens (**SAT 1, 2 or 3**) which can each display up to 6 preset channels. The radio will tune to the last used channel on that band.

The Satellite band selection box can be closed by selecting **SAT radio**.
- Indicates currently selected SAT band and station title.
- Information display.
- Seek down:
 - Touch to seek previous available channel.

- Seek up:
 - Touch to find the next available channel.
- Settings:** Touch to view the SAT settings menu:
 - Sound and Bal/Fade:** see **104, AUDIO SETTINGS**.
 - Song Seek:** Select to add the currently playing track to the song memory. The track can be subsequently selected for playback if the audio system detects that it is being broadcast by a subscribed channel. See **113, SONG SEEK**.

If the song memory is already full, and the vehicle is stationary, the option to edit the memory is available on a pop-up screen. Delete an existing track from the memory, to allow the current track to be stored.

Satellite radio

7. **SAT Options:** Touch to access the following:

- **Category Lists:** Select to view a list of all the channel categories.

Select the desired category to view the list of corresponding channels. Make your channel selection from the list.

- **Direct Channel:** Select to use the numerical touch-pad to enter a 3-digit channel number (e.g. 012), then select **OK** to tune to that channel.

- **Parental Lock:** Select individual channels or entire categories (**Lock all**) from the list. Locked channels/categories cannot be selected without first entering the correct PIN. A 4-digit PIN needs to be entered to access the parental lock area (e.g. 125 must be entered as 0125 etc.).

If a PIN is lost or forgotten: Select **Parental Lock** and hold for 10 seconds the release. Select **SAT Information** and hold for 10 seconds and release. The PIN will be reset to the default of 1111. Select **Edit PIN** and enter a new number.

- **Channel Skip:** Select individual channels or entire categories (select **Skip all**) from the list. The selected channels/categories will be skipped when using the Seek controls.
- **SAT Information:** Select to view your SIRIUS ID number and subscription contact number.

8. **Station presets:** Each Satellite band has 6 preset positions.

- Touch and release to tune the radio to the station stored on that preset.
- Touch and hold for approximately 2 seconds to store the current station on that preset (the radio will mute while the station is stored).
- Use the seek buttons on the steering wheel to select the next or previous preset station.

Note: *If you attempt to select a preset channel that is now unavailable or invalid, **No reception** is displayed.*

9. **Text transmitted by Satellite channels.** Touch the adjacent arrow to view the complete message as a pop-up. Briefly touch the pop-up to remove it.

SUBSCRIPTION SETUP

Channel 184 (The Weather Channel) is available as a preview channel for a limited time only. Once the preview has expired, or to receive further satellite radio stations, you will need to subscribe to SIRIUS.

From inside your vehicle and with ignition on, call SIRIUS using the number displayed in the SAT Info screen (available from the Settings menu). You will need your credit card details and the Electronic Serial Number (ESN) which is also displayed on the SAT Info screen.

Subscription authorization/activation can take up to 35 minutes.

Note: *Do not use a phone connected to the vehicle via Bluetooth to call SIRIUS, as no phone can be docked to the vehicle during the subscription process.*

SATELLITE RADIO RECEPTION

Satellite radio can significantly increase the number of radio channels available.

Where satellite signal strength is adversely affected by terrain, ground transmitters are used to relay the signal.

***Note:** If any auxiliary electrical equipment is connected to the vehicle, then this may reduce the radio sound quality.*

SONG SEEK

If a subscribed channel is broadcasting a track that is stored in the song memory, a pop-up will be displayed giving you the option to tune to the channel playing that track.

CHANNEL UPDATE

Channel line-ups will be automatically updated. When this occurs, the audio will mute and **Updating channels...** is displayed along with a progress bar. Once the update is complete, the radio will tune to the last tuned channel or if the last tuned channel is now invalid, the radio will tune to the lowest channel number available.

After the automatic update the following should be noted:

- All locked channels will be unlocked.
- All skipped channels will be unskipped.