

## ADAPTIVE CRUISE CONTROL OVERVIEW

The Adaptive Cruise Control (ACC) system is designed to aid the driver to maintain a gap from the vehicle ahead or a set road speed if there is no slower vehicle ahead. ACC is available at vehicle speeds of 20 to 112 mph (32 to 180 km/h).

### **⚠WARNING**

**ACC is not a substitute for driving safely, with due care and attention. ACC may not function properly under all weather and road conditions.**

**Do not use ACC in poor visibility, specifically fog, heavy rain, spray or snow.**

**ACC is not a collision warning or avoidance system and driver's should not assume that this feature will correct errors of judgement while driving.**

**Additionally, ACC will not react to:**

- **Stationary or slow moving vehicles below 6 mph (10 km/h).**
- **Pedestrians or objects in the roadway.**
- **Oncoming vehicles in the same lane.**


The ACC system uses a radar sensor, which projects a beam directly forward of the vehicle to detect objects ahead.

The radar sensor is mounted in the center of the lower bumper, to provide a clear view forward for the radar beam.

- Only use ACC when conditions are favourable (i.e. main roads with free flowing traffic).
- Do not use in poor visibility, specifically fog, heavy rain, spray or snow.
- Do not use on icy or slippery roads.
- It is the drivers responsibility to stay alert, drive safely and be in control of the vehicle at all times.

- Keep the area in front of the radar sensor free from dirt, metal badges or objects, including vehicle front protectors, which may prevent the sensor from operating.
- Do not use ACC when entering or leaving a highway.

## USING ACC

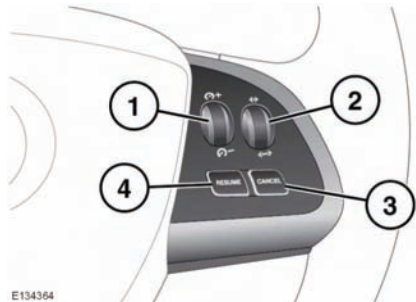

1. **SET:** Roll the thumbwheel upward or downwards to increase or decrease speed, until the desired speed is achieved.
2. Gap increase or decrease control. Four settings are selectable by rolling the thumbwheel. See **98, CHANGING THE FOLLOW MODE SET GAP.**
3. **CANCEL:** Cancels but retains the set speed in memory.
4. **RESUME:** Resumes the ACC set speed after it has been disengaged.

The system is operated by controls mounted on the steering wheel. The driver can also intervene at any time by use of the brake or accelerator pedals.

Setting the vehicle speed, activating, and deactivating ACC is done in the same way as using cruise control.

# Adaptive cruise control

## ENTERING FOLLOW MODE

### **⚠ WARNING**

**When in follow mode, the vehicle will not decelerate automatically to a stop, nor will the vehicle always decelerate quickly enough to avoid a collision.**


**Note:** Follow mode cannot be disengaged independently from the speed maintenance aspect of cruise control.

Once a set speed has been selected, the driver can release the accelerator and the set road speed will be maintained.

When a vehicle ahead enters the same lane or a slower vehicle is ahead in the same lane, the vehicle speed will be adjusted automatically until the gap to the vehicle ahead corresponds to the default gap setting (gap level 3). The vehicle is now in **follow mode**.



The amber warning lamp in the instrument panel will be illuminated.

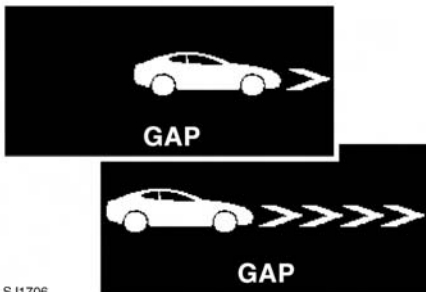

SJ1706

The message center will display the gap set.

The vehicle will then maintain the constant time gap to the vehicle ahead until:

- The vehicle ahead accelerates to a speed above the set speed.
- The vehicle ahead moves out of lane or out of view.
- A new gap distance is set.

If necessary, the vehicle brakes will be automatically applied to slow the vehicle to maintain the gap to the vehicle in front.

The maximum braking which is applied by the ACC system is limited and can be overridden by the driver applying the brakes, if required.

**Note:** Driver braking will cancel ACC.

If the ACC system predicts that its maximum braking level will not be sufficient, then an audible warning will sound while the ACC continues to brake. **Driver Intervene** will be displayed on the message center. The driver should take immediate action.

When in follow mode, the vehicle will automatically return to the set speed when the road ahead is clear, for instance when:

- The vehicle in front accelerates or changes lane.
- The driver changes lane to either side or enters an exit lane.

The driver should intervene if appropriate.

## CHANGING THE FOLLOW MODE SET GAP

Four gap settings are available and the selected gap setting will be displayed on the message center when the gap adjustment control is operated.

Each gap level is indicated by an additional chevron in front of the vehicle icon in the message center (one chevron (gap level 1) being the shortest, four chevrons (gap level 4) being the longest).

**Note:** When the ignition is switched off, the gap setting will revert to the default setting (gap level 3) when switched on again.

**Note:** It is the driver's responsibility to select a gap appropriate to the driving conditions.

## OVERRIDING THE SPEED AND FOLLOW MODE

### **⚠ WARNING**

Whenever the driver is overriding the ACC by depressing the accelerator pedal, the ACC will not automatically apply the brakes to maintain separation from any vehicle ahead.

The set speed and gap can be overridden by pressing the accelerator pedal when cruising at constant speed or in follow mode. If the vehicle is in follow mode, the warning lamp will go out when the ACC is overridden by the driver using the accelerator and **CRUISE OVERRIDE** will be displayed on the message center. When the accelerator is released the ACC function will operate again and vehicle speed will decrease to the set speed, or a lower speed if follow mode is active.

## AUTOMATIC LOW SPEED SWITCH-OFF

If the speed of the vehicle decreases below 18 mph (30 km/h), the ACC system will be automatically switched off and the warning lamp will go out.

If the brakes were being applied by the ACC system, they will be slowly released.

This will be accompanied by an audible warning, and **DRIVER INTERVENE** will be displayed on the message center. The driver must take control.

## ACC AUTO OFF

ACC will disengage, but not clear the memory when:

- The **CANCEL** button is pressed.
- The brake pedal is pressed.
- Neutral (**N**), Park (**P**) or Reverse (**R**) gear is selected.
- Dynamic Stability Control activates.

ACC will disengage, and clear the memory when:

- The ignition system is switched off.
- Maximum vehicle speed is reached.
- A fault occurs in the ACC system.

## RESUMING THE SPEED AND FOLLOW MODE

**RESUME** should only be used if the driver is aware of the set speed and intends to return to it.

By pressing the **RESUME** button after ACC has been cancelled, for example, after braking, the ACC will become active again provided that the set speed memory has not been erased. The original set speed will be resumed (unless a vehicle ahead causes the follow mode to become active) and the set speed will be displayed in the message center for 4 seconds.

## HINTS ON DRIVING WITH ACC

The system acts by regulating the speed of the vehicle using engine control and the brakes. Gear changes may occur in response to deceleration or acceleration while in ACC.

ACC is not a collision avoidance system. However, during some situations the system may provide the driver with an indication that intervention is required.

An audible alarm will sound, accompanied by the message **DRIVER INTERVENE** if the ACC detects:

- A failure has occurred while the system is active.
- That using maximum ACC braking only is not sufficient.


**Note:** ACC operates when the gear selector lever is in position **S** or **D**.

# Adaptive cruise control

**Note:** When engaged, the accelerator pedal rests in the raised position. Fully release the pedal to allow normal ACC operation.

**Note:** When braking is applied by the ACC, the vehicle brake lamps will be switched on although the brake pedal will not move.

## DETECTION BEAM ISSUES

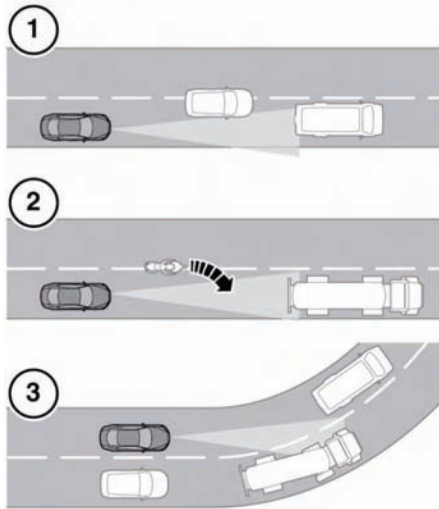

E132535

Detection issues can occur:

1. When driving on a different line to the vehicle in front.
2. When a vehicle edges into your lane. The vehicle will only be detected once it has moved fully into your lane.
3. There may be issues with the detection of vehicles in front when going into and coming out of a bend.

In these cases ACC may brake late or unexpectedly. The driver should stay alert and intervene if necessary.

## ACC MALFUNCTION

If a malfunction occurs during operation of the system in cruise or follow modes, the ACC system will switch off and cannot be used until the fault is cleared. The message **Driver Intervene** appears briefly and is then replaced by the message **Cruise Not Available**. If malfunction of the ACC or any related system occurs at any other time, the message **Cruise Not Available** will be displayed. It will not be possible to activate the ACC system in any mode.

Accumulations of dirt, snow or ice on the sensor or cover may inhibit ACC operation. Fitting of a vehicle front protector or metallised badges may also affect ACC operation.

The ACC system relies on its radar to detect objects and constantly scans ahead. If the radar is unable to detect any objects ahead, then ACC will be deactivated, the audible alarm sounds and the message **Driver Intervene** displays briefly. The message **ACC Sensor Blocked** will then be displayed.

The same messages may also be displayed while driving on open roads with few objects for the radar to detect.


Clearing the obstruction from in front of the sensor allows the system to return to normal operation. If the obstruction is present when ACC is inactive (e.g. on initial starting or with the ACC system switched off), the message **ACC Sensor Blocked** will be displayed.

Tires other than those recommended for your vehicle, may have different sizes. This can affect the correct operation of the ACC.

## FORWARD ALERT FUNCTION

Limited detection and warning of objects ahead, is provided during ACC operation by the ACC **Forward Alert** warning. The enhanced forward alert feature additionally provides warnings when ACC is not engaged; if an object is detected close ahead, then the warning tone and message will be issued. The brakes will not be applied.

The forward alert system does not initiate any action. The driver must take appropriate action when the **Forward Alert** message is displayed. However, the system monitors driver actions (e.g. braking, steering or indicating) and may not initiate the warning display if the appropriate action has been taken early enough.

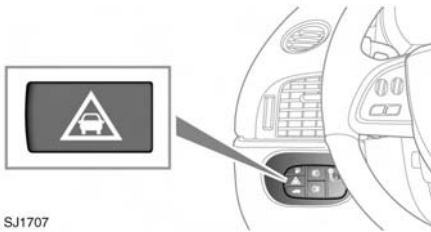

SJ1707

Press the button to switch Forward alert on or off.




When the warning lamp in the instrument panel is on, Forward alert is active.

The sensitivity of the warning can only be adjusted with ACC disengaged. Adjust as follows:

- Roll the gap adjustment control downwards to decrease the sensitivity of the alert.
- Roll the gap adjustment control upwards to increase the sensitivity of the alert.

**Note:** The forward alert set gap is retained when the ignition is switched off.

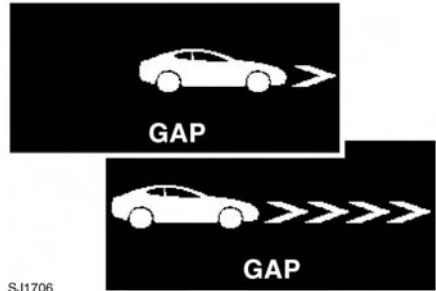

SJ1706

**Forward Alert** is displayed in the message center.