


## CD PLAYER CONTROLS

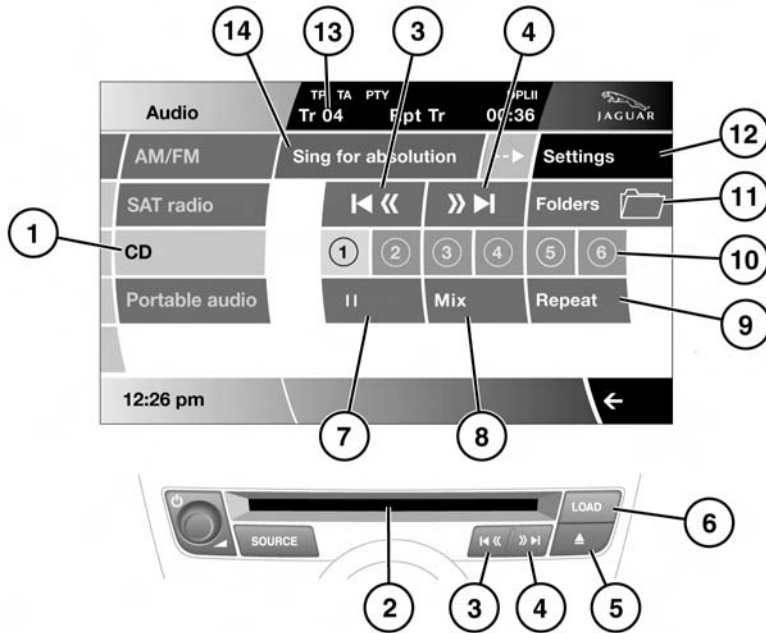

SJ1757

### **WARNING**

**Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.**

1. **CD**: Select to view the CD menu.
2. CD loading slot, see **119, LOADING COMPACT DISCS**.
3. Skip/Scan backward:
  - Touch and release within 3 seconds of track playback to skip to the previous track.
  - Touch and release after 3 seconds of track playback to skip to the beginning of the current track.
4. Skip/Scan forward:
  - Touch and release to skip to the next track on the current CD.
  - Touch and hold to scan forwards through the current track. Playback will resume when either button is released.
5. CD eject button:
  - A short press will eject a single CD, a long press will eject each loaded CD in turn (six disc player only).
  - To stop ejecting multiple discs, select **Cancel** on the touch-screen.
6. **Load**: Select before loading multiple CDs, see **119, LOADING COMPACT DISCS**.

7. **Pause/Play:** Select to pause playback. Select again to resume playback.
8. **Mix:**
  - Briefly touch to play random tracks from CD. A **Mix CD** message is displayed.
  - On MP3 CDs, a short press will play random track from the current folder. A **Mix folder** message is displayed.
  - Touch and hold to play random tracks from all the loaded CDs or all MP3 folders. A **Mix all** message is displayed.
  - Touch and release again to cancel **Mix** mode.
9. **Repeat:**  
In **CD** or **MP3** mode.
  - Briefly touch to repeat the current track. A **Rpt Tr** is displayed.
  - Touch and hold (2 seconds) to repeat the whole CD or all tracks in the current folder (MP3).
  - Touch **Repeat** again to cancel and return to normal play back.
10. **CD loading and selection:**
  - Indicates when CDs are loaded, not loaded or playing, see **119, LOADING COMPACT DISCS**.
  - Touch numbered square to play that CD.
11. **Folders:** MP3 CDs:
  - Select to view the folder list on the device.
  - Select the folder name to display the tracks in that folder.
  - Select a track to start playback of that track. Play will continue through the remainder of the tracks in the folder.
12. **Settings:** Touch to view portable media settings.
  - **Sound and Bal/Fade:** see **104, AUDIO SETTINGS**.
  - **Options:** Touch to select:
    - Traffic:** Activate/deactivate traffic announcements (TA).
    - CD text:** Activate/deactivate playback information.
13. **Display shows:** Track number (Tr 02), chosen function (Rpt Tr, Mix all etc.) and track elapsed run-time (00.00 or Paused).
14. **Display of information** (if available) about the current track, including track title, artist, album and genre. Touch the adjacent arrow to toggle through the information which is displayed as a pop-up.

## LOADING COMPACT DISCS

### **NOTICE**

*Do not force the disc into the slot.*

### **NOTICE**

*Do not use irregular shaped CDs and CDs with a scratch protection film or self-adhesive labels attached.*

### **NOTICE**

*The CD unit will play compact discs that conform to the international Red Book standard audio specification. Playback of CDs not conforming to this standard cannot be guaranteed.*

### **NOTICE**

*Recordable (CD-R) discs and re-writable (CD-RW) discs may not function correctly.*

### **NOTICE**

*Dual format, dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and consequently playback cannot be guaranteed and jamming may occur.*

