


## AUDIO CONTROLS

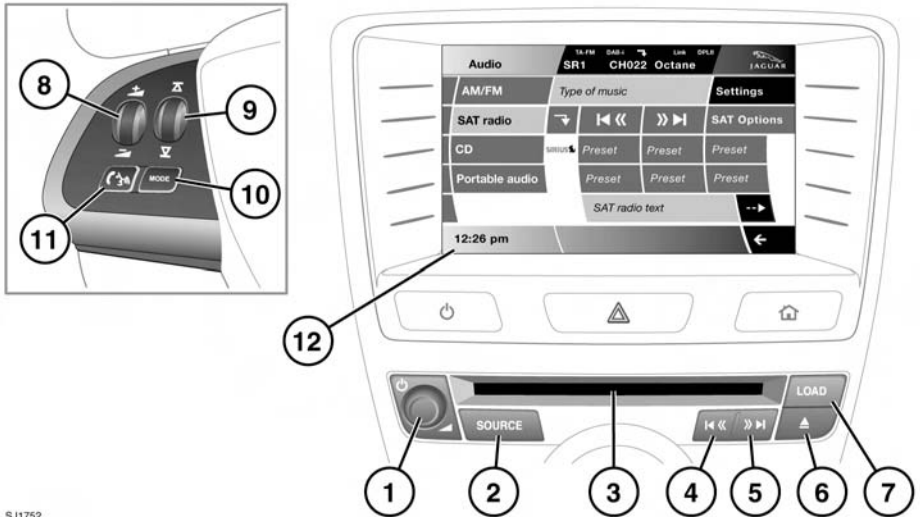

SJ1752

### **⚠ WARNING**

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents causing serious injury or death.

### **⚠ CAUTION**

Sustained exposure to high sound levels can damage your hearing.

1. Press to switch the audio system on/off.  
Rotate to adjust volume level.

**Note:** The audio system will operate with the ignition on or off, but will switch off with the ignition. Switch the audio on again if required. The system will remain on for approximately 10 minutes.

2. SOURCE: Press repeatedly to scroll through all audio/video sources.
3. CD loading slot.

The player will accommodate one disc or up to six discs depending on the audio unit fitted, see **119, LOADING COMPACT DISCS**.

4. Seek down:
  - Short press:
    - To auto seek down the frequency to the next radio station.
    - To select the previous track or start of current track on chosen audio source - CD, MP3 etc.
  - Long press:
    - To activate radio manual seek mode.
    - To skip backward through current audio source track.

With radio manual seek mode activated, further short presses will change the frequency in single decrements. A further long press will scan backward through the current waveband until the button is released.

# Audio overview

## 5. Seek up:

Short press:

- To auto seek up the frequency to the next radio station.
- To select the next track on chosen audio source - CD, MP3 etc.

Long press:

- To activate radio manual seek mode.
- To scan forwards through the current audio source track.

With radio manual seek mode activated, further short presses will change the frequency in single increments. A further long press will scan forwards through the current waveband until the button is released.

## 6. CD eject button.

## 7. **LOAD:** Press to load a CD, see **118, CD PLAYER CONTROLS.**

## 8. Rotate to adjust volume.

## 9. Rotate (up or down) and release repeatedly to scroll through:

- The radio presets.
- The previous track or start of next track on chosen audio source - CD, MP3 etc.

## 10. **MODE:** Press repeatedly to scroll through all audio sources.

## 11. If Telephone control are not fitted, press to mute/un-mute audio. Otherwise, if Telephone is fitted, see **124, TELEPHONE SYSTEM OVERVIEW.**

## 12. Touch screen.

## AUDIO SETTINGS

To access: **Sound, Bal/Fade, Options** or **PTY**, select **Settings** on the touch screen.

**Sound:**

Under **Sound** there is:


**DSP** (Digital Signal Processing).

- Select to change to optimise the sound for: **Front, Driver** or **All**.

**Stereo** or **3 Ch.** (3-channel stereo).

- Select to alter the levels of, Bass, Treble, or Sub (subwoofer). Increase or decrease by touching the **+** or **-** buttons.
- Also in **3 Ch.**, scroll down to change the levels for, **Center** and **Surround**.

**Bal/Fade**, Balance (left to right) and Fade (front to rear):

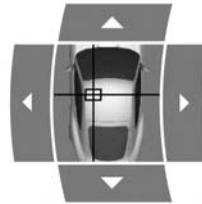

SJ1734

- Touch the arrow soft keys to move the sound focal point to the desired area of the vehicle (the focal cross-hairs will appear red when not in the default position).

**Options:**

- Various setting options.

**PTY (program type):**

- Touch to select a list of PTY categories that contain channels. Select a PTY category to display a list of channels in that category.

LICENSING



E92512

Dolby Pro Logic Surround and the double-D are registered trademark of Dolby Laboratories. Manufacturing rights for Dolby Pro Logic Surround System are licensed from Dolby Laboratories Licensing Corporation.