


CLIMATE CONTROL

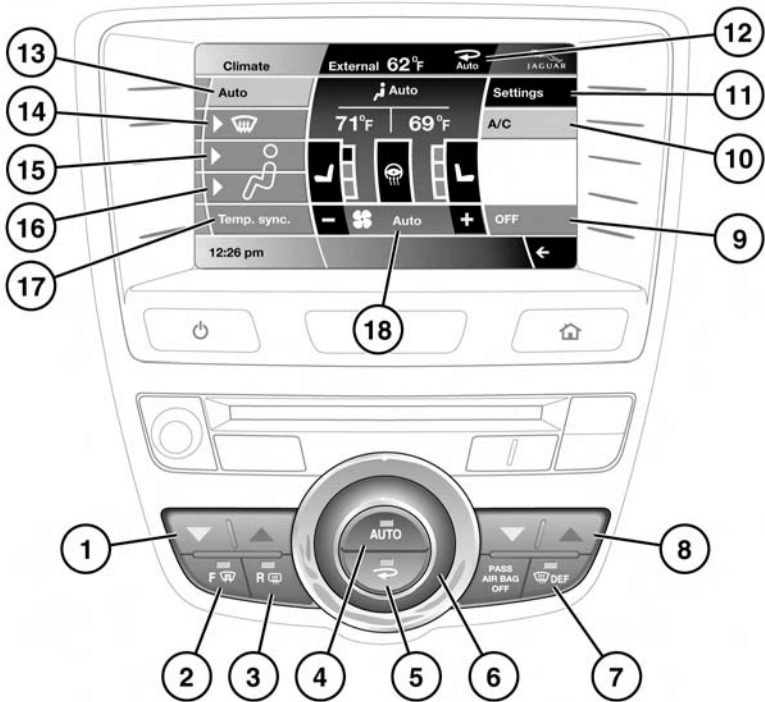

SJ1753

To access the Climate menu on the touch screen, select **Climate** from the **Home** menu, see **59, TOUCH SCREEN HOME MENU**.

1. Left-hand temperature control: Press the blue or red arrows to adjust the temperature for the left side of the vehicle. The temperature is displayed on the touch screen (**HI** or **LO** is displayed when the maximum or minimum setting is selected).
Note: The maximum possible temperature differential between left and right hand temperature settings is 5.4°F (3°C).
2. Front screen heater, see **64, HEATED SCREENS**.
3. Rear screen heater, see **64, HEATED SCREENS**.
4. Press to turn on **AUTO** climate control, see **64, AUTOMATIC CLIMATE CONTROL**.
5. Air recirculation, see **64, RECIRCULATION**.
6. Blower speed rotary control.
7. Press to defrost and demist the windshield. When selected the blower switches on at high speed but can be adjusted manually. The front and rear screen heaters and door mirror heaters switch on automatically (if the engine is running).

Heating and ventilation

8. Right-hand temperature control: Press the blue or red arrows to adjust the temperature for the right side of the vehicle. The temperature is displayed on the touch screen (**HI** or **LO** is displayed when the maximum or minimum setting is selected).
9. Touch to switch climate control on or off.
10. Air conditioning on/off. When the air conditioning is turned off, Economy mode is selected, which reduces the power consumed by the climate system.
Note: Prolonged use of Economy mode may cause the windows to fog.
11. **Settings** menu, select to adjust personal climate zone settings, also access to the automatic air recirculation sensor control setting.
12. Recirculation symbol, see **64**,
RECIRCULATION
13. Touch to select **AUTO** mode, see **64**,
AUTOMATIC CLIMATE CONTROL.
14. Touch to select air distribution to the windshield.
15. Touch to select air distribution to the face.
16. Touch to select air distribution to the feet.
17. Touch to synchronize the left and right-hand side climate control zones.
18. Blower speed: Touch + or - symbols to increase or decrease the blower speed.
Blower speed is automatically set in **AUTO** mode. Adjusting the blower speed will cancel **AUTO** mode.

In addition to the selectable controls, the climate menu displays symbols that indicate the status of heating and ventilation functions.

Note: If the climate control system is switched off, pressing an AUTO button (4 or 13) or the Defrost button (7), will switch the climate system on.

AUTOMATIC CLIMATE CONTROL

AUTO mode should be used as the normal operating mode. The air conditioning, heating and ventilation controls automatically provide an optimum environment at the selected temperature.

Note: Screen heating may be selected in AUTO mode. Any other manual adjustment cancels AUTO operation.

Note: Water expelled by the air conditioning may collect underneath the vehicle when parked. This is not a cause for concern.

HEATED SCREENS

With the engine running, the front (**F**) and rear (**R**) screen heaters, may be switched on and off in any mode, including with the climate control system off.

The front and rear screen heaters switch off automatically after a timed period depending on the ambient temperature. In cold ambient conditions, (the front screen below 41°F (5°C) and rear below 30°F (-1°C)), the screen heaters will switch on automatically when the engine is started.

RECIRCULATION

Press the air recirculation switch (**5**). Selection is indicated by a screen symbol (**12**) and the button indicator illuminates.

When selected, the air is recirculated inside the vehicle. This helps to maintain a high or low temperature, and is useful for preventing fumes from entering the vehicle.

Note: Prolonged use at low temperatures may cause the windows to fog.

Recirculation may also be selected in **AUTO** mode, if the climate control system detects high levels of pollution in the atmosphere outside the vehicle (if an air quality sensor is fitted). Manual operation of the recirculation control will override the automatic setting.

EXTERNAL TEMPERATURE

The external temperature is displayed in the **Home** menu of the touch screen.

When the external temperature is low enough that ice may be present on the road, an amber snowflake warning lamp will illuminate in the instrument panel.

TEMPERATURE CONTROLS

The driver and front seat passenger zone temperatures can be independently adjusted.

The temperature for each zone is displayed on the relevant side of the touch screen.

Note: *The maximum possible temperature differential between the driver and passenger settings is 5.4°F (3°C).*

HEATED SEATS

Note: *The seat heaters will only operate when the engine is running.*

The heated seats are controlled from the **Home** or **Climate** menu on the touch screen. See **59, TOUCH SCREEN HOME MENU.**

- Touch repeatedly to adjust to the desired temperature, the first press is fully on (3 red bars).
- Touch the red or blue arrows to adjust to the desired temperature.

CLIMATE SEATS

Note: *The climate seats will only operate when the engine is running.*

Seat ventilation is controlled from the **Home** or **Climate** menu on the touch screen.

Heated ventilation:

- Touch the red arrow above the appropriate seat icon to switch heated ventilation on at maximum (3 red bars).
- Touch the blue arrow below the seat icon once or twice to reduce the ventilation setting (2 and 1 red bars).
- Touch the blue arrow a third time to switch off seat ventilation.

Cooled ventilation:

- Touch the blue arrow below the appropriate seat icon to switch cooled ventilation on at maximum (3 blue bars).
- Touch the red arrow above the seat icon once or twice to reduce the ventilation setting (2 and 1 blue bars).
- Touch the red arrow a third time to switch off seat ventilation.

To select seatback ventilation only:

- Select **Settings** from the **Climate** menu.
- Select the appropriate icon for full seat or seatback only ventilation.