


Message center

INFORMATION DISPLAY

The driver message and information display is situated within the instrument panel.

The primary function of the message center is to inform the driver of the following:

- Warning messages.
- Temporary alert messages.
- Information messages.
- Turn-by-turn navigation information.

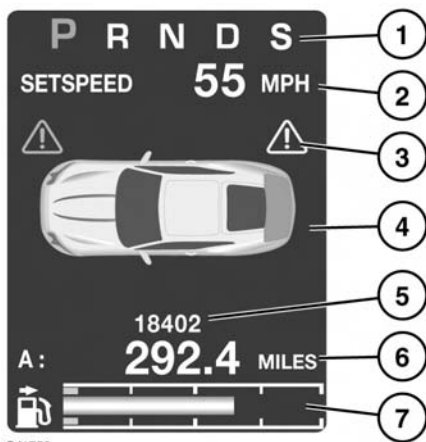

SJ1758

1. Gear selection, automatic or manual.
2. Speed control related information.
3. Priority warning indicators.
4. Warning messages (red or amber), if system faults are detected. Status messages are displayed to indicate changes in state of certain vehicle functions (e.g. navigation, telephone).

When there are no current warning messages, turn-by-turn navigation information is displayed. This facility can be turned off via the touch-screen.

As an option the clock can be displayed.

5. Trip computer information, including digital speedometer and total distance covered by the vehicle. See **57, TRIP COMPUTER**.
6. Set trip computer information display to **A, B** or **Auto** trip computer. See **57, TRIP COMPUTER**. When selected using the trip computer button, this area also shows the current electronic engine oil dipstick reading. See **159, CHECKING THE ENGINE OIL LEVEL**
7. The fuel level gauge, which changes color from blue to red when the fuel drops to the reserve fuel level indicator. The small arrow on the top of the fuel pump symbol denotes which side of the vehicle the fuel filler cap is located.

WARNING AND INFORMATION MESSAGES

WARNING

Do not ignore warning messages. Take appropriate action and, when necessary, seek qualified assistance before driving the vehicle. Failure to do so could result in failure of vehicle systems potentially causing loss of control and an accident.

Most warning messages, when displayed, have an associated warning indicator (red or amber) that will illuminate to indicate the message priority. Information messages will also be displayed.

If more than one message is active, each is displayed in turn for 2 seconds in order of priority.

Note: *The message center messages and their meanings, are detailed where necessary within the appropriate subject sections.*

It is possible to temporarily clear certain warning or information messages from the message center.

When a message is displayed in the message center (e.g. **WASHER FLUID LOW**), a red warning triangle icon appears on the touch-screen, see **59, TOUCH SCREEN HOME MENU**.

Touch the icon to temporarily stop the currently displayed message from appearing. Once the message is removed, the color of the warning icon in the message center changes to white, as a reminder that an outstanding message exists.

Note: *Certain warnings, that are critical for the safe operation of the vehicle, cannot be cleared from the display.*

Note: *If multiple messages are displayed, this process can be repeated to remove all messages from the display.*

Removed messages will display again, whenever the ignition is switched on, until the fault is rectified (i.e. in this example, when the washer fluid is topped up).

TRIP COMPUTER

The computer memory stores data for a journey or series of journeys until it is reset to zero.

The displayed information is for guidance only, as it can be affected by traffic, road and weather conditions.


Three independent memories are available, **A**, **B** and **Auto**. **A** and **B** memories can be reset independently, while the **Auto** trip will reset after every ignition cycle as the vehicle moves.

Full trip computer information for the trip memories can be displayed on the vehicle touch-screen, while current selected trip computer information is displayed on the instrument panel message center.

To access the trip computer touch-screen settings:

- From the main **Home** menu, select **Vehicle**.
- Select **Trip computer**.
- Select requirements from the menu.

USING THE TRIP COMPUTER

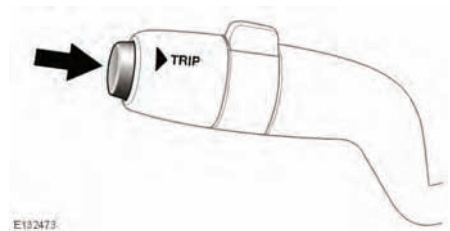

Press the **TRIP** button on the end of the left column stalk repeatedly to display the trip data in the following order:

- Trip Distance.
- Average Speed.
- Engine Oil Level.
- Digital Speed.
- Average Fuel Consumption.
- Range.

To reset the displayed trip data, press and hold the **TRIP** button.

TRIP DISTANCE

Distance travelled since the last memory reset. The maximum trip reading is 9 999.9 miles (16 090 kilometres). The computer will automatically reset to zero if this distance is exceeded.

RANGE

This shows the predicted distance, miles or kilometres, that the vehicle should travel on the remaining fuel, assuming fuel consumption stay constant.

METRIC/IMPERIAL/MIXED DISPLAY

The display of metric, imperial or mixed units is selected via the touch screen:

- With the touch screen switched on, select **Vehicle** from the **Home** menu.
- Select **Units**, then **Preferences**.
- Touch the appropriate button to select Metric or Imperial units.

***Note:** Temperature display can be changed between °F (Fahrenheit) and °C (Celsius) independently of Imperial or Metric units.*

SERVICE INTERVAL INDICATOR

The service interval message will only be displayed when the vehicle has less than 2000 miles (3200 km) before the service is due.

When the ignition is switched on, and the vehicle has started its service countdown, **SERVICE REQ'D XXXX MLS (XXXX km)** is displayed in the message center.

When the service distance has been reached, **SERVICE REQUIRED** is displayed in the message center.

NOTICE

If no service interval indicator is displayed during the vehicle service cycle, make sure that your vehicle is serviced in accordance with the intervals, as stated in the Passport to Service.