

## A

- ABS (Anti-lock braking system)
  - warning lamp . . . . . 52
- ACC (Adaptive cruise control) . . . . . 97
  - ASL (Active speed limiter) . . . . . 102
  - ASL (Automatic speed limiter)
    - setting . . . . . 102
    - suspending . . . . . 102
  - automatic switch-off . . . . . 99
  - driving hints . . . . . 99
  - fault . . . . . 100
  - follow mode . . . . . 98
  - gap change . . . . . 98
  - low speed switch-off . . . . . 99
  - malfunction . . . . . 100
  - override . . . . . 99
  - resume follow mode . . . . . 99
  - resume set speed . . . . . 99
  - warning lamp . . . . . 53
- ACC (adaptive cruise control)
  - operating . . . . . 97
- Accessory wheels and tires . . . . . 168
- Active differential control . . . . . 84
- Active head restraints
  - air bags . . . . . 32
- Adaptive dynamics . . . . . 84
- Adaptive front lighting system (AFS)
  - warning lamp . . . . . 53
- AFS (Adaptive front lighting system) . . . . . 39
- After a collision
  - rollover bars . . . . . 195
- Age degradation (tires) . . . . . 179
- Air bags
  - active head restraints . . . . . 32
  - deactivation indicator . . . . . 36
  - deployment . . . . . 33, 35
  - module covers . . . . . 156
  - service information . . . . . 37
  - SRS (Supplementary restraint system) . . . . . 150
  - warning lamps . . . . . 36, 53
- Air conditioning
  - auto . . . . . 64
- Alarm
  - automatic relocking and arming . . . . . 14
  - battery backed sounder . . . . . 14
  - deactivating . . . . . 14
  - passive arming . . . . . 14
  - perimeter . . . . . 14
  - sensor fault . . . . . 15
  - tilt sensor . . . . . 14
- Anchor points (LATCH) . . . . . 30
- Antifreeze level check . . . . . 161
- Anti-trap protection
  - windows . . . . . 45
- Approach lamps . . . . . 39
- Arduous driving conditions . . . . . 151
- ASL (Automatic speed limiter) . . . . . 102
  - gap change . . . . . 98
  - resuming . . . . . 102
  - setting . . . . . 102
  - suspending . . . . . 102
  - warning lamp . . . . . 53
- Audible warnings . . . . . 54
- Audio
  - CD
    - controls . . . . . 118
    - controls . . . . . 103
    - loading CDs . . . . . 119
    - MP3 . . . . . 120
  - portable media
    - connections . . . . . 114
    - controls . . . . . 116
    - safety . . . . . 114
    - settings . . . . . 104
- Audio system . . . . . 155
- Auto mode (climate) . . . . . 64
- Automatic gearbox . . . . . 80
- Automatic locking . . . . . 11
- Automatic switch off (ACC) . . . . . 99
- Automatic switch off (cruise) . . . . . 96
- Auxiliary devices
  - connecting multiple devices . . . . . 117

# Index

- B**
- Battery
- care ..... 171
  - changing
    - timed climate remote ..... 173
  - charging ..... 173
  - jump starting ..... 172, 173
    - connecting jump leads ..... 172
    - disconnecting jump leads ..... 173
  - monitoring system ..... 172
  - warning symbols ..... 171
- Battery backed sounder ..... 14
- Beltminder ..... 25
- warning lamp ..... 24, 51, 52
- Bluetooth ..... 121
- telephone
    - compatibility ..... 122
    - icons ..... 123
    - overview ..... 124
    - pairing ..... 122
    - safety ..... 121
- Brakes
- ABS warning lamp ..... 52
  - EBA (Emergency brake assist) ..... 87
  - EBD (Electronic brake force distribution) ..... 86
  - fluid
    - check ..... 162
    - specification ..... 163
    - top up ..... 163
  - handbrake ..... 87
  - warning lamp ..... 51
  - warning lamps ..... 86
- BSM (Blind spot monitor)
- detection beam issues ..... 100
- C**
- Calibration
- navigation system ..... 134
- Call volume ..... 125
- Cameras
- rear view ..... 94
- Cancelling guidance ..... 134
- Capacities ..... 168
- Carpets and mats ..... 155
- Car-wash ..... 154
- CD player
- controls ..... 118
  - loading discs ..... 119
- Changing a fuse ..... 185
- Changing a wheel ..... 90
- Changing the battery (timed climate) ... 173
- Charging the vehicle battery ..... 173
- Chassis number ..... 196
- Child restraints ..... 26
- check list ..... 27
  - positioning ..... 29
- Child seats ..... 26
- check list ..... 27
  - LATCH anchor points ..... 30
  - positioning ..... 29
  - tether straps ..... 30
- Cleaning
- alloy wheels ..... 153
  - carpets and mats ..... 155
  - convertible roof ..... 153
  - exterior ..... 153
    - paintwork ..... 153
  - glass ..... 154
  - interior ..... 154, 155
  - leather ..... 154
  - parking sensors ..... 93
  - polishing ..... 154
  - rear screen ..... 154
  - removing grease ..... 154
  - removing stains ..... 155
  - removing tar ..... 154
  - under hood ..... 154
  - using a car-wash ..... 154
- Climate control
- auto ..... 64
  - overview ..... 65
  - recirculation ..... 64
  - temperature ..... 65
- Climate seats ..... 65

- Clock . . . . . 155
  - Closing
    - alarm sensor faults . . . . . 15
    - convertible roof . . . . . 69
  - Closing the hood . . . . . 157
  - Closing the luggage compartment . . . . . 66
  - Condensation (headlamps) . . . . . 39
  - Controls
    - headlamps . . . . . 38
    - steering wheel
      - set cruise speed . . . . . 95
  - Convertible roof
    - cleaning . . . . . 153
    - closing . . . . . 69
    - luggage separator . . . . . 69
    - manual closing . . . . . 73
    - manual re-set . . . . . 71
    - opening . . . . . 68
    - preparation for winter . . . . . 156
  - Coolant
    - checking the level . . . . . 161
    - specification . . . . . 161
    - top up . . . . . 161
  - Cruise control
    - ACC (Adaptive cruise control) . . . . . 97
      - low speed switch-off . . . . . 99
      - malfunction . . . . . 100
      - operating . . . . . 97
      - override . . . . . 99
      - resume follow mode . . . . . 99
      - resume set speed . . . . . 99
    - automatic switch off . . . . . 96
    - change speed . . . . . 95
    - follow mode . . . . . 98
    - operating . . . . . 95
    - resume . . . . . 95
    - setting vehicle speed . . . . . 95
- D**
- DAB radio
    - controls . . . . . 111
  - Daily checks . . . . . 151
  - Daylight running lamps . . . . . 39
  - Deselecting valet mode . . . . . 62
  - Destination entry . . . . . 133
    - freeway . . . . . 136
    - map . . . . . 135
    - navigation search area . . . . . 131
    - previous . . . . . 136
    - route preferences . . . . . 133
    - zip code . . . . . 135
  - Detection beam issues . . . . . 100
  - Dialling a number . . . . . 126
  - Differential control . . . . . 84
  - Dimensions . . . . . 167
  - Direction indicators . . . . . 38
    - warning lamp . . . . . 53
  - Disability modifications . . . . . 150
  - Door transceiver
    - entry gate . . . . . 50
    - garage door opener . . . . . 48
    - programming . . . . . 49
    - programming a single button . . . . . 50
    - rolling code device programming . . . . . 50
  - Drive away locking . . . . . 11
  - Drive control
    - operation . . . . . 85
  - Driver controls . . . . . 214
  - Driver information module
    - information messages . . . . . 56
    - trip computer . . . . . 57
    - warning lamps . . . . . 51
    - warning messages . . . . . 56
  - Driving
    - ACC (Adaptive cruise control) . . . . . 97, 99
      - override . . . . . 99
    - adaptive cruise control
      - automatic switch off . . . . . 99
    - arduous conditions . . . . . 151
    - ASL (Automatic speed limiter) . . . . . 102
      - setting . . . . . 102
    - before starting . . . . . 195
    - controls . . . . . 214
    - cruise control
      - automatic switch off . . . . . 96

# Index

- change speed . . . . . 95
- set speed . . . . . 95
- daily checks . . . . . 151
- DSC warning lamp
  - active . . . . . 52
  - off . . . . . 53
- dynamic mode . . . . . 83
- EBA (Emergency brake assist) . . . . . 87
- EBD (Electronic brake force distribution) . . . . . 86
- forward alert . . . . . 101
- mirror dip when reversing . . . . . 47
- sitting correctly . . . . . 18
- wipers
  - rain sensor . . . . . 42
- DSC (Dynamic stability control)
  - switching between DSC and tracDSC . . . 83
  - switching off . . . . . 84
  - switching on . . . . . 84
  - warning lamp
    - active . . . . . 52
    - off . . . . . 53
  - warning lamps . . . . . 84
- Dynamic mode . . . . . 83
- E**
- EBA (Emergency brake assist) . . . . . 87
- EBD (Electronic brake force distribution) . . 86
- Electric seats
  - front . . . . . 16
- Electronic brake force distribution (EBD) . . 86
- Electronic parking brake (EPB) . . . . . 87
- Engine
  - compartment
    - cleaning . . . . . 154
    - fuse box . . . . . 186
    - opening . . . . . 157
    - overview . . . . . 158
  - coolant level checking . . . . . 161
  - engine compartment . . . . . 158
  - engine malfunction warning lamp . . . . . 52
  - failure to start . . . . . 78
  - malfunction warning lamp . . . . . 52
  - number . . . . . 196
  - oil consumption . . . . . 160
  - oil level check . . . . . 159
  - oil level consumption . . . . . 160
  - oil specification . . . . . 160
  - specifications . . . . . 165
  - starting . . . . . 79
  - starting the engine . . . . . 77
  - switching off . . . . . 77
- Entering a zip code
  - navigation system . . . . . 135
- Entering the vehicle
  - entry and exit mode . . . . . 21
  - keyless entry . . . . . 10
- Entertainment
  - CD
    - controls . . . . . 118
  - DAB radio
    - controls . . . . . 111
  - portable media
    - connecting devices . . . . . 115
    - connecting multiple devices . . . . . 117
    - connections . . . . . 114
    - controls . . . . . 116
    - safety . . . . . 114
  - radio
    - controls . . . . . 106
    - RDS (Radio data system) . . . . . 107
  - touch screen . . . . . 155
    - display icons . . . . . 60
    - home menu . . . . . 59
    - operating . . . . . 60
    - system settings . . . . . 61
    - touch screen care . . . . . 59
- Entry and exit mode . . . . . 21
- EPB (Electric parking brake) . . . . . 87
- Ethanol . . . . . 147
- Exiting the vehicle
  - door locks and release levers . . . . . 13
  - global closing . . . . . 13
  - keyless locking . . . . . 13
- Exterior cleaning . . . . . 153

- Exterior mirrors . . . . . 46
- External temperature display . . . . . 65
- Extinguisher . . . . . 153
  
- F**
- Faulty alarm sensors . . . . . 15
- Filler flap . . . . . 148
- Fire extinguisher . . . . . 153
- First aid kit . . . . . 153
- Flat spots . . . . . 179
- Fluids
  - brake
    - check . . . . . 162
    - specification . . . . . 163
    - top up . . . . . 163
  - capacities . . . . . 168
  - coolant
    - specification . . . . . 161
    - top up . . . . . 161
  - engine oil
    - check . . . . . 159
    - specification . . . . . 160
  - fuel tank capacity . . . . . 148
  - power steering
    - check . . . . . 163
    - specification . . . . . 164
  - specifications . . . . . 165
  - washer
    - specification . . . . . 164
    - top up . . . . . 164
- Fog lamps
  - warning lamp . . . . . 53
- Follow mode
  - entering . . . . . 98
  - gap change . . . . . 98
  - override . . . . . 99
  - resume . . . . . 99
  - suspending . . . . . 102
- Forward alert . . . . . 101
- Freeway entry/exit . . . . . 135
  
- Front parking aid
  - operation . . . . . 92
  - system fault . . . . . 93
- Fuel and refuelling
  - ethanol . . . . . 147
  - filler flap . . . . . 148
  - fuel specification . . . . . 149
  - fuel system . . . . . 152
  - methanol . . . . . 147
  - MTBE (Methyl tertiary butyl ether) . . . . . 147
  - octane rating . . . . . 146
  - reformulate gasoline . . . . . 147
  - running out . . . . . 147
  - safety precautions . . . . . 146
  - tank capacity . . . . . 148
- Fuses
  - changing . . . . . 185
  - engine compartment fuse box . . . . . 186
  - locations . . . . . 184
  - luggage compartment fuse box . . . . . 188
  - passenger compartment fuse box . . . . . 187
  
- G**
- Garage door opener . . . . . 48
  - entry gate . . . . . 50
  - erase all programming . . . . . 49
  - programming . . . . . 49
    - a single button . . . . . 50
    - rolling code device . . . . . 50
- Gasoline
  - octane rating . . . . . 146
  - reformulated gasoline . . . . . 147
- Gear selector . . . . . 81
  - malfunction . . . . . 81
- Gearbox
  - automatic . . . . . 80
  - identification number . . . . . 196
  - limp home mode . . . . . 82
  - operation . . . . . 85
  - selector . . . . . 81
  - selector malfunction . . . . . 81
  - temporary manual selection . . . . . 81

# Index

winter mode . . . . .	83
Glass cleaning . . . . .	154
Global closing . . . . .	13
Global opening . . . . .	10

## H

Handbrake . . . . .	87
Handling	
adaptive dynamics . . . . .	84
DSC warning lamp	
active . . . . .	52
off . . . . .	53
dynamic mode . . . . .	83
EBD (Electronic brake force distribution) . . . . .	86
Head restraints . . . . .	20
active . . . . .	32
Headlamps	
adaptive . . . . .	39
AFS (Adaptive front lighting system) . . .	39
approach lamps . . . . .	39
condensation . . . . .	39
controls . . . . .	38
daylight running lamps . . . . .	39
high beam warning lamp . . . . .	53
warning lamp (AFS) . . . . .	53
washers . . . . .	43
wiper detection . . . . .	39
Heated screens . . . . .	64
Heated seats . . . . .	65
Heated steering wheel . . . . .	21
Heating and ventilation	
auto . . . . .	64
recirculation . . . . .	64
High beam	
warning lamp . . . . .	53
Homelink . . . . .	48
programming a single button . . . . .	50
rolling code device programming . . . . .	50
Hood	
closing . . . . .	157
opening . . . . .	157

## I

Identifying the vehicle	
transmission number . . . . .	196
Ignition	
rolling re-start . . . . .	79
switching off while moving . . . . .	79
switching on . . . . .	77
Indicators . . . . .	38
warning lamp . . . . .	53
Information messages . . . . .	56
Infotainment	
CD	
controls . . . . .	118
DAB radio	
controls . . . . .	111
navigation	
coordinates . . . . .	136
POI (Points of interest) . . . . .	134, 136
restore defaults . . . . .	134
portable media . . . . .	114
connecting devices . . . . .	115
connecting multiple devices . . . . .	117
connections . . . . .	114
controls . . . . .	116
radio	
controls . . . . .	106
RDS (Radio data system) . . . . .	107
telephone	
last 10 . . . . .	126
pairing . . . . .	122
phonebook . . . . .	126
touch screen . . . . .	155
display icons . . . . .	60
home menu . . . . .	59
operating . . . . .	60
system settings . . . . .	61
touch screen care . . . . .	59
Instrument pack . . . . .	155
Instrument panel	
information messages . . . . .	56
lamp test . . . . .	51
trip computer . . . . .	57
warning lamps . . . . .	51

- warning messages . . . . . 56
  - Interior cleaning . . . . . 154, 155
    - carpets and mats . . . . . 155
  - Interval indicator . . . . . 58
- J**
- Jaguar Dealers
    - navigation system . . . . . 136
  - Jaguardrive control
    - operation . . . . . 85
  - Jump starting . . . . . 172, 173
    - connecting jump leads . . . . . 172
    - disconnecting jump leads . . . . . 173
- K**
- Keyless entry . . . . . 10
  - Keyless locking . . . . . 13
- L**
- Label locations . . . . . 196
  - Lamp test . . . . . 51
  - Lamps
    - condensation . . . . . 39
    - controls . . . . . 38
    - wiper detection . . . . . 39
  - LATCH anchor points . . . . . 30
  - Leather cleaning . . . . . 154
  - Lights
    - condensation . . . . . 39
    - controls . . . . . 38
  - Limp home mode . . . . . 82
  - Loading the map DVD . . . . . 128
  - Locking
    - alarm sensor faults . . . . . 15
    - automatic relocking . . . . . 14
    - confirmation . . . . . 14
    - door locks and release levers . . . . . 13
    - drive away . . . . . 11
    - global closing . . . . . 13
    - keyless . . . . . 13
    - mislock . . . . . 13
  - Locking and unlocking
    - alarm
      - perimeter . . . . . 14
      - sensor faults . . . . . 15
    - passive arming . . . . . 14
    - unlocking . . . . . 8
  - Lubricants
    - specifications . . . . . 165
  - Luggage compartment
    - closing . . . . . 66
    - fuse box . . . . . 188
    - opening . . . . . 66
  - Luggage separator . . . . . 69
- M**
- Main menu
    - navigation . . . . . 130
  - Maintenance
    - blocked washer jets . . . . . 152
    - brake fluid check . . . . . 162
    - capacities . . . . . 168
    - changing a fuse . . . . . 185
    - checking the tire pressures . . . . . 178
    - checking the tire pressures after
      - a repair . . . . . 144
    - cleaning
      - polishing . . . . . 154
      - removing grease and tar . . . . . 154
      - removing stains . . . . . 155
    - cleaning alloy wheels . . . . . 153
    - cleaning glass . . . . . 154
    - cleaning parking sensors . . . . . 93
    - cleaning rear screen . . . . . 154
    - closing the hood . . . . . 157
    - convertible roof . . . . . 153
    - coolant level checking . . . . . 161
    - daily checks . . . . . 151
    - engine compartment . . . . . 158
    - exterior cleaning . . . . . 153
    - fuse box (luggage compartment) . . . . . 188
    - interior cleaning . . . . . 154, 155
    - jump starting . . . . . 172, 173

connecting jump leads . . . . .	172
disconnecting jump leads . . . . .	173
label locations . . . . .	196
leather cleaning . . . . .	154
lubricants and fluid specifications . . . . .	165
paintwork repair . . . . .	153
preparation for winter . . . . .	156
smart key battery changing . . . . .	12
weekly checks . . . . .	151
Manual closing	
convertible roof . . . . .	73
Media	
portable media . . . . .	114
connections . . . . .	114
Memory points	
adding . . . . .	135
navigation system . . . . .	137
Memory seats	
recalling a position . . . . .	18
Message center	
trip computer . . . . .	57
change display . . . . .	57
range . . . . .	57
Methanol . . . . .	147
Minor paintwork damage repair . . . . .	153
Mirrors	
dip when reversing . . . . .	47
Mirrors and windows	
BSM (Blind spot monitor)	
detection beam issues . . . . .	100
exterior mirrors . . . . .	46
Modifications for disabilities . . . . .	150
Monitoring system (battery) . . . . .	172
MP3 . . . . .	120
MTBE (Methyl tertiary butyl ether) . . . . .	147

## N

Navigation	
cancel guidance . . . . .	134
destination entry . . . . .	133
coordinates . . . . .	136
freeway . . . . .	136
map . . . . .	135
previous destinations . . . . .	136
route preferences . . . . .	133
search area . . . . .	131
start guidance . . . . .	133
zip code . . . . .	135
end user agreement . . . . .	138
keyboard layout . . . . .	131
language selection . . . . .	131
licenses . . . . .	138
loading the DVD . . . . .	128
main menu . . . . .	130
map text size . . . . .	131
measurement units . . . . .	131
memory points . . . . .	137
add . . . . .	135
overview . . . . .	128
POI (Points of interest) . . . . .	136
quick POI selection . . . . .	134
points of interest (POI)	
categories . . . . .	137
entry by category . . . . .	137
entry by town . . . . .	137
Jaguar Dealers . . . . .	136
list button . . . . .	137
search area . . . . .	137
restore defaults . . . . .	134
screen mode . . . . .	132
screen modes . . . . .	133
setting avoid points . . . . .	135
settings	
calibration . . . . .	134
setup . . . . .	129
stored locations . . . . .	134
home . . . . .	135
user settings . . . . .	131
vehicle position/direction . . . . .	134

**O**

Occupant safety	
child seats	
tether straps	30
seatbelts	156
seatbelt safety	22
warning lamp	24, 51

## Oil

engine	
consumption	160
level check	159
engine oil specification	160
used engine oil	152

One-touch operation (windows)	44
-------------------------------	----

## Opening

alarm sensor faults	15
hood	157
luggage compartment	66
Opening convertible roof	68

Overriding speed and follow mode (cruise)	99
---	----

**P**

Paddle shift	
temporary manual selection	81

Paintwork	
cleaning	153
repair	153

Parking aid	92
rear view camera	94
sensor cleaning	93
system fault	93

Parking brake	87
---------------	----

Passenger compartment fuse box	187
--------------------------------	-----

Passive arming	14
----------------	----

Perimeter alarm	14
-----------------	----

Phone	
bluetooth	121
call volume	125
changing connected phone	123
compatibility	122
dialling	126

icons	123
last 10	126
overview	124
pairing using a cell phone	122
pairing using touch screen	122
phonebook	126
safety	121
settings menu	125

POI (Points of interest)	136
navigation system	134

Points of interest (POI)	
categories and sub-categories	137
entry by category	137
entry by town	137
Jaguar Dealerships	136
list	137
search area	137

Portable media	114
connecting devices	115
connecting multiple devices	117
connections	114
controls	116

Positioning child restraints	29
------------------------------	----

Power steering	
fluid	
check	163
specification	164

Preparation for winter	156
------------------------	-----

Pressure	
checking	178

Pressures	
checking after a repair	144
winter tires	179

Previous destinations	
navigation system	136

Programming	
garage door opener	49
erase all	49

Puncture repair kit	140
instructions for use	141
repair procedure	143
safety	140

Punctured tires	178
-----------------	-----

# Index

- R**
- Radio
    - controls . . . . . 106
    - PTY (program type) . . . . . 107
    - RDS (Radio data system) . . . . . 107
  - Rain sensor . . . . . 42
  - RDS (Radio data system) . . . . . 107
  - Rear screen cleaning . . . . . 154
  - Recalling seat memory position . . . . . 18
  - Recirculation . . . . . 64
  - Recovery
    - towing eyes . . . . . 194
    - transporting . . . . . 194
  - Reformulated gasoline . . . . . 147
  - Refuelling . . . . . 148
    - octane rating . . . . . 146
    - reformulated gasoline . . . . . 147
    - running out of fuel . . . . . 147
    - safety precautions . . . . . 146
  - Remote control
    - battery changing . . . . . 12
    - care . . . . . 11
    - system transmitters . . . . . 169
  - Repairing paintwork damage . . . . . 153
  - Replacement sensor (TPMS) . . . . . 91
  - Replacement tires . . . . . 178
  - Reporting safety defects . . . . . 6
  - Resetting the windows . . . . . 152
  - Restarting the engine whilst moving . . . . . 79
  - Restore default settings (navigation system) . . . . . 134
  - Restraints (child) . . . . . 26, 27
    - positioning . . . . . 29
  - Resume speed and follow mode (ACC) . . . . . 99
  - Resuming set speed (ASL) . . . . . 102
  - Resuming set speed (cruise) . . . . . 95
  - Reverse parking aid
    - operation . . . . . 92
    - rear view camera . . . . . 94
    - system fault . . . . . 93
  - Rolling re-start . . . . . 79
  - Rollover bars . . . . . 37, 195
  - Rollover protection device (RPD) . . . . . 37, 195
  - Running out of fuel . . . . . 147
- S**
- Safety
    - fuel and refuelling . . . . . 146
    - in the garage . . . . . 151
    - seatbelts . . . . . 22, 156
      - warning lamp . . . . . 24, 51
    - sitting correctly . . . . . 18
    - used engine oil . . . . . 152
    - using the telephone . . . . . 121
    - warning triangle . . . . . 153
  - Safety defects . . . . . 6
  - Safety precautions
    - tire care . . . . . 175
  - Satellite navigation
    - overview . . . . . 128
  - Satellite radio
    - subscription . . . . . 112
  - Screen modes (navigation system) . . . . . 133
  - Screens (heated) . . . . . 64
  - Seatbelts . . . . . 156
    - beltminder . . . . . 25
    - beltminder warning lamp . . . . . 52
    - checks . . . . . 22
    - safety . . . . . 22
    - warning lamp . . . . . 24, 51
  - Seats
    - child seats
      - tether straps . . . . . 30
    - climate . . . . . 65
    - electric
      - front . . . . . 16
    - head restraints . . . . . 20
    - heated . . . . . 65
    - memory
      - recalling a position . . . . . 18
    - seatbelts . . . . . 156
      - safety . . . . . 22
      - warning lamp . . . . . 24, 51

- Security
  - alarm
    - passive arming. . . . . 14
    - perimeter . . . . . 14
    - tilt sensor. . . . . 14
  - automatic relocking and arming . . . . . 14
  - battery backed sounder . . . . . 14
  - deactivating the alarm . . . . . 14
  - lock confirmation. . . . . 14
  - sensor faults . . . . . 15
- Selecting valet mode . . . . . 61
- Selector fails to elevate . . . . . 81
- Sensors
  - replacements (TPMS) . . . . . 91
  - security sensor faults . . . . . 15
- Service information
  - air bags . . . . . 37
- Service interval indicator . . . . . 58
- Servicing
  - interval indicator . . . . . 58
- Setting a destination (navigation) . . . . . 133
- Setting avoid points
  - navigation system . . . . . 135
- Setting cruise speed . . . . . 95
- Settings
  - navigation language. . . . . 131
  - phone . . . . . 125
  - vehicle . . . . . 60
- Setup
  - navigation system . . . . . 129
- Side lights
  - warning lamp . . . . . 53
- Silencing the alarm . . . . . 14
- Sitting correctly . . . . . 18
- Smart key
  - battery changing . . . . . 12
  - care . . . . . 11
  - transmitters. . . . . 169
- Snow chains . . . . . 179
- Specifications
  - dimensions . . . . . 167
  - engine . . . . . 165
  - engine number. . . . . 196
  - engine oil . . . . . 160
  - ethanol . . . . . 147
  - fluids. . . . . 165
    - washer. . . . . 164
  - fuel . . . . . 149
  - fuel tank capacity . . . . . 148
  - label locations . . . . . 196
  - lubricants . . . . . 165
  - methanol. . . . . 147
  - weights . . . . . 165
- Speed limiter
  - setting . . . . . 102
- Speed-dependent wipers . . . . . 42
- SRS
  - air bags . . . . . 150
- SRS (Supplementary restraint system)
  - air bag covers . . . . . 156
  - air bag deployment . . . . . 35
  - air bag warning lamp . . . . . 36, 53
  - child seat check list . . . . . 27
  - child seat positioning . . . . . 29
  - child seats. . . . . 26
  - LATCH anchor points . . . . . 30
  - seatbelts (beltminder) . . . . . 25
  - seatbelts (beltminder) warning lamp. . . 52
- Stability control
  - switching between DSC and tracDSC . . 83
  - switching off . . . . . 84
  - switching on . . . . . 84
  - tracDSC. . . . . 83
    - switching between tracDSC and DSC 83
  - warning lamps . . . . . 84
- Starting
  - preparation . . . . . 195
- Starting navigation guidance. . . . . 133
- Starting the engine . . . . . 77, 79
- Steering wheel
  - adjusting . . . . . 21
  - controls
    - set cruise speed . . . . . 95
    - heated . . . . . 21
- Stopping navigation guidance. . . . . 134

# Index

- Storage compartments . . . . . 76
    - cup holders . . . . . 76
    - front cubby box . . . . . 76
    - glove box . . . . . 76
    - rear armrest . . . . . 76
  - Stored locations
    - avoid points . . . . . 135
    - home . . . . . 135
    - navigation system . . . . . 134
    - store a memory point . . . . . 135
  - Suspending ASL (Automatic speed limiter) . . . . . 102
  - Switching off the engine . . . . . 77
  - Switching off the ignition while moving . . . 79
  - Switching on the engine . . . . . 77
  - Switching on the ignition . . . . . 77
- ## T
- Technical specifications
    - weights . . . . . 165
  - Telephone
    - bluetooth . . . . . 121
    - call volume . . . . . 125
    - changing the connected telephone . . . 123
    - compatibility . . . . . 122
    - dialling . . . . . 126
    - icons . . . . . 123
    - last 10 . . . . . 126
    - overview . . . . . 124
    - pairing . . . . . 122
    - phonebook . . . . . 126
    - safety . . . . . 121
    - settings . . . . . 125
  - Temperature (external) . . . . . 65
  - Tilt sensor . . . . . 14
  - Timed jet function . . . . . 43
  - Tire pressure checking . . . . . 178
  - Tire pressure checking after repair . . . . . 144
  - Tire pressure label . . . . . 176
  - Tire pressure monitoring system (TPMS)
    - replacement sensor . . . . . 91
  - Tire repair kit
    - repair procedure . . . . . 143
  - Tires
    - age degradation . . . . . 179
    - changing . . . . . 90
    - flat spots . . . . . 179
    - pressures
      - winter tires . . . . . 179
    - punctured . . . . . 178
    - repair kit . . . . . 140, 141
      - repair procedure . . . . . 143
      - safety . . . . . 140
    - replacements . . . . . 178
    - snow chains . . . . . 179
    - temporary use spare . . . . . 90
    - tire care . . . . . 175
    - TPMS (Tire pressure monitoring system) . . . . . 89
      - overview . . . . . 89
      - warning lamp . . . . . 53
    - valves . . . . . 178
    - winter . . . . . 179
  - Touch screen . . . . . 155
  - CD
    - controls . . . . . 118
    - display icons . . . . . 60
    - home menu . . . . . 59
    - navigation
      - POI (Points of interest) . . . . . 136
    - operating . . . . . 60
    - portable media . . . . . 114
      - connecting devices . . . . . 115
      - connecting multiple devices . . . . . 117
    - connections . . . . . 114
    - controls . . . . . 116
    - system settings . . . . . 61
  - telephone
    - last 10 . . . . . 126
    - pairing . . . . . 122
    - phonebook . . . . . 126
  - touch screen care . . . . . 59
  - valet mode . . . . . 61
  - vehicle settings . . . . . 60, 61

- Tow eye (front) . . . . . 194
  - Towing eyes . . . . . 194
  - TPMS (Tire pressure monitoring system) . 89
    - overview . . . . . 89
    - replacement sensor . . . . . 91
    - tire care . . . . . 175
    - valves . . . . . 178
    - warning lamp . . . . . 53
  - tracDSC . . . . . 83
    - warning lamps . . . . . 84
  - Traction control
    - switching between DSC and tracDSC . . 83
    - switching off . . . . . 84
    - switching on . . . . . 84
    - tracDSC . . . . . 83
      - switching between tracDSC and DSC. 83
    - warning lamps . . . . . 84
  - Transmission
    - gear selector . . . . . 81
    - identification number . . . . . 196
    - limp home mode . . . . . 82
    - operation . . . . . 85
    - selector fails to elevate . . . . . 81
    - temporary manual selection . . . . . 81
    - winter mode . . . . . 83
  - Transmission (automatic) . . . . . 80
  - Transmitters
    - smart key . . . . . 169
  - Transporting the vehicle . . . . . 194
  - Trim
    - air bag covers (cleaning) . . . . . 156
  - Trip computer . . . . . 57
    - change display . . . . . 57
    - range . . . . . 57
  - Turning on the engine . . . . . 77
- U**
- Under hood cleaning . . . . . 154
  - Unlocking . . . . . 8, 13
    - alarm sensor faults . . . . . 15
    - entry and exit mode . . . . . 21
    - global opening . . . . . 10
    - keyless entry . . . . . 10
    - passive arming . . . . . 14
  - Used engine oil . . . . . 152
  - User settings
    - navigation . . . . . 131
  - Using cruise control . . . . . 95
- V**
- Valet mode . . . . . 61
    - deselecting . . . . . 62
  - Vehicle battery care . . . . . 171
  - Vehicle cleaning
    - alloy wheels . . . . . 153
    - carpets and mats . . . . . 155
    - exterior . . . . . 153
    - interior . . . . . 154, 155
    - parking sensors . . . . . 93
    - rear screen . . . . . 154
  - Vehicle handling . . . . . 84
  - Vehicle identification
    - transmission number . . . . . 196
  - Vehicle position/direction
    - navigation system . . . . . 134
  - Vehicle recovery
    - attaching the front tow eye . . . . . 194
    - towing eyes . . . . . 194
    - transporting the vehicle . . . . . 194
  - Vehicle settings . . . . . 60
    - valet mode . . . . . 61
  - VIN number . . . . . 196
  - Volume
    - telephone . . . . . 125
- W**
- Warning lamps . . . . . 51
    - ABS . . . . . 52
    - ACC . . . . . 53
    - adaptive cruise control . . . . . 53
    - adaptive front lighting system . . . . . 53
    - AFS . . . . . 53
    - air bags . . . . . 36, 53
    - ASL (Automatic speed limiter) . . . . . 53

# Index

- audible warnings and indicators . . . . . 54
- beltminder . . . . . 52
- brake . . . . . 51, 86
- DSC . . . . . 52, 53
- engine malfunction . . . . . 52
- fog lamps . . . . . 53
- headlamp high beam . . . . . 53
- indicators . . . . . 53
- lamp test . . . . . 51
- seatbelt . . . . . 24, 51
- side lights . . . . . 53
- stability control . . . . . 84
- TPMS (Tire pressure monitoring system) . . . . . 53
- Warning messages . . . . . 56
- Warning symbols (battery) . . . . . 171
- Warning triangle . . . . . 153
- Washer jets
  - blockages . . . . . 152
- Washers
  - operating . . . . . 42
  - timed jet function . . . . . 43
  - windscreen . . . . . 43
- Washers (headlamps) . . . . . 43
- Washing
  - exterior
    - paintwork . . . . . 153
    - removing tar . . . . . 154
  - interior
    - removing stains . . . . . 155
    - polishing . . . . . 154
    - removing grease . . . . . 154
    - under the hood . . . . . 154
- Weekly checks . . . . . 151
- Weights . . . . . 165
- Wheels and tires
  - accessory wheels and tires . . . . . 168
  - age degradation . . . . . 179
  - changing a tire . . . . . 90
  - checking the pressures . . . . . 178
  - checking the pressures after a repair . . . . . 144
  - flat spots . . . . . 179
  - puncture repair . . . . . 140
  - safety . . . . . 140
  - punctured . . . . . 178
  - repair kit . . . . . 140, 141
    - repair procedure . . . . . 143
    - safety . . . . . 140
  - replacements . . . . . 178
  - snow chains . . . . . 179
  - temporary use spare . . . . . 90
  - tire care . . . . . 175
  - tire changing . . . . . 90
  - tire label . . . . . 196
  - tire pressure label . . . . . 176
  - TPMS (Tire pressure monitoring system) . . . . . 89
    - overview . . . . . 89
    - warning lamp . . . . . 53
  - valves . . . . . 178
  - wheel changing . . . . . 90
  - winter tires . . . . . 179
- Windows . . . . . 44
  - anti-trap protection . . . . . 45
  - one-touch operation . . . . . 44
  - reset . . . . . 152
- Windscreen wipers
  - speed-dependent mode . . . . . 42
- Windscreens (heated) . . . . . 64
- Winter mode . . . . . 83
- Winter tires . . . . . 179
  - pressures . . . . . 179
- Wipers
  - drip wipe . . . . . 43
  - operating . . . . . 42
- Wipers and washers
  - fluid
    - specification . . . . . 164
    - top up . . . . . 164
  - operating . . . . . 42
  - rain sensor . . . . . 42
  - timed jet function . . . . . 43
  - windscreen washers . . . . . 43
  - wipers
    - speed-dependent mode . . . . . 42

**X**

Xenon headlamps  
wiper detection ..... 39