


TOUCH SCREEN HOME MENU

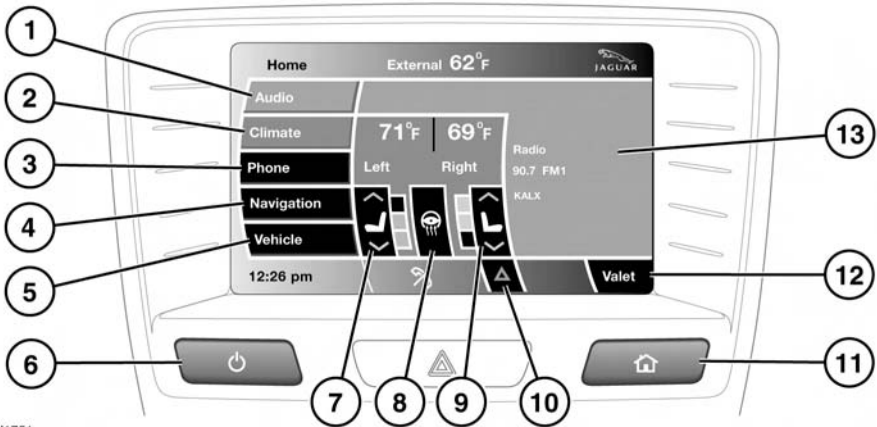

SJ1751

1. Touch to view the **Audio** menu. See **103, AUDIO CONTROLS**.
2. Touch to view the touch screen **Climate** menu. Internal front left and right temperature settings and external temperature are also shown on the **Home** menu. See **63, CLIMATE CONTROL**.
3. Touch to view the **Phone** menu. See **124, TELEPHONE SYSTEM OVERVIEW**.
4. Touch to select the **Navigation** menu. See **129, NAVIGATION SETUP**.
5. Touch to select the **Vehicle** menu, the following functions can be set: Trip computer, Clock, Contrast and brightness (Cont./Bright), System settings (Syst. settings) and Vehicle settings (Veh. settings). See **60, VEHICLE MENU**.
6. Press to turn the touch screen on or off.
7. Left hand side heated or climate seat controls, see **65, HEATED SEATS** or **65, CLIMATE SEATS**.
8. Touch to turn the heated steering wheel on (red icon) or off.
9. Right hand side heated or climate seat controls, see **65, HEATED SEATS** or **65, CLIMATE SEATS**.
10. Warning message icon. See **56, WARNING AND INFORMATION MESSAGES**.
11. Press to return the touch screen to the Home menu.
12. Touch to select **Valet** mode.
*Note: To enter/exit Valet mode, the correct PIN will need to be entered. See **61, SELECTING VALET MODE**.*
13. An overview of current audio information.
*Note: When the engine is stopped, the touch-screen reverts to stand-by mode. To activate the touch-screen press the **START/STOP** button again.*

TOUCH SCREEN CARE

NOTICE

Care must be taken to avoid spilling or splashing fluids onto the touch-screen.

Touch screen

NOTICE

Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/Authorized Repairer.

TURNING OFF THE TOUCH SCREEN

1. Press the screen on/off button once to activate the screensaver (see **59, TOUCH SCREEN HOME MENU**). If the screensaver has not been set, a single press will turn off the touch screen.
2. Press the screen on/off button twice to turn off the touch screen.
3. To turn on the touch screen, press the screen on/off button.

TOUCH SCREEN USE

NOTICE

Always run the engine during prolonged use of the touch screen.

The buttons on the center console, below the touch screen display, are referred to as **hard buttons** and should be pressed firmly. The touch screen buttons are referred to as **soft keys** and only require light pressure to function. Do not use excessive pressure.

TOUCH SCREEN DISPLAY ICONS

Touch screen display icons are as follows (they may not all be displayed at the same time):



Return to the previous screen.



Warning icon, indicating a warning pop-up message. Touch the pop-up to cancel. The warning message will be displayed in the message center.



Telephone: start call/send button.



Telephone: end call.



Page up or increase setting to required value.



Page down or decrease setting to required value.



Direct access to the valet mode setting screen.



Telephone signal strength indicator



Telephone battery charge indicator.



No telephone connected.

VEHICLE MENU

Selecting **Vehicle** on the **Home** screen gives access to the following:

- **Trip computer:** Select to switch trip computer readings between **Trip A**, **Trip B** and **Trip Auto**. Select **Reset** to zero the trip computer readings. Select **Units** to switch the trip computer readings between Imperial and Metric measurements.
- **Clock adjust:** Select 12 or 24 hour clock. Touch the appropriate up or down arrow buttons to adjust hours and minutes. Select **Set**, to store new settings.
- **Cont./Bright:** The touch-screen contrast and brightness can be set to individual requirements, including dimming for night driving (**Auto dimming Off** or **On**). By selecting **On**, the brightness and contrast are automatically adjusted by the ambient light level.

For further adjustment use the **+** and **-** buttons next to **Brightness** and **Contrast** on the **Cont./Bright** screen.

Note: The brightness of the touch-screen and instrument panel can also be controlled by the instrument panel dimmer switch, see **214, DRIVER CONTROLS**.

- **Syst. settings:** See **61, SYSTEM SETTINGS**.
- **Veh. settings:** See **61, VEHICLE SETTINGS**.

SYSTEM SETTINGS

Selecting **Syst. settings** on the **Vehicle** menu screen gives access to the following:

- **Display set:** On this screen you can select the screensaver to be displayed.

Also the Timeout to home menu screen (return to display the **Home** menu) can be adjusted. Select **Off** or **On** next to **Timeout to home screen**. Using the adjustment bar, the timeout can be adjusted from 10 seconds to 5 minutes.

Note: A default setting of 1 minute is set if no time adjustment is made.

- **Preferences:** The language, distance units and temperature display can be set.
- **Button audio:** Use to change **Feed back on button press**. Select **Off** or **On** for both **Audible** or **Voice**.
- **Vol. presets:** Use to adjust the volume for **Park aid**, **Navigation** and **Phone**. The **AVC** (automatic volume control) can be set to **Low**, **Medium** or **High**.

VEHICLE SETTINGS

Selecting **Veh. settings** on the **Vehicle** menu screen gives access to the following:

- **Security:** Select to enable/disable or alter the settings of the following:
 - Drive away locking**, select **Off** or **On**. Also the **Speed** can be set (8, 16 or 32 km/h or 5, 10 or 20 mph).
 - Also **2 stage locking** can be switched **Off** or **On**.
- **Parking:** Select to enable/disable **Reverse mirror dip**.
- **Valet mode:** see **61, SELECTING VALET MODE**.

SELECTING VALET MODE

Valet mode allows the vehicle to be locked by a parking attendant, without giving access to the luggage compartment and glove box. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

From the **Home** menu, select **Valet** (or see **61, VEHICLE SETTINGS**) then enter a four digit Personal Identification Number (PIN) (personally chosen). On completion, touch the **OK** soft key.

If you wish to cancel the PIN, touch the **C** soft key. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.

Once the PIN has been correctly entered, a security information pop-up is displayed. Read the information and remove the emergency key from the Smart Key, then select **OK**.

Valet on is displayed to indicate that the PIN has been accepted. The luggage compartment and glove box are now securely locked in Valet mode.

Touch screen

On exiting and securing the vehicle (with the emergency key removed). Retain the emergency key and give the Smart Key to the attendant.

Note: *The emergency key can be used to open the luggage compartment, which may de-activate Valet mode.*

DESELECTING VALET MODE

When you enter the vehicle, select the Valet mode screen.

Enter your four digit PIN and touch the **OK** button. A pop-up is displayed. Read the information and replace the emergency key.

Valet off is displayed to indicate that your PIN has been accepted.

- The luggage compartment will return to the previously set security requirement.
- The glove box will now open as normal.

Note: *If the PIN is forgotten, open the luggage compartment using the emergency key blade to cancel Valet mode, see **66, OPENING AND CLOSING THE LUGGAGE COMPARTMENT.***