

## RANGE

This shows the predicted distance (kilometres or miles) that the vehicle should travel on the remaining fuel, assuming fuel consumption stays constant.

## METRIC/IMPERIAL/MIXED DISPLAY

The trip computer readings can be changed between metric, imperial and mixed units in the **Trip Computer** menu within the **Set-up** menu. See **61, TOUCH SCREEN SETUP**.

***Note:** Temperature display can be changed between °C (Celsius) and °F (Fahrenheit) independently of Metric or Imperial units.*

## SERVICE INTERVAL INDICATOR

An approaching service interval will be notified to the driver via the Message centre, as a distance remaining until service is due. Once the distance is exceeded, **SERVICE REQUIRED** is displayed in the Message centre.



If no service interval indicator is displayed during the vehicle service cycle, make sure that your vehicle is serviced in accordance with the intervals, as stated in the Service Portfolio.