

Instrument panel

WARNING AND INFORMATION MESSAGES



Do not ignore warning messages, take appropriate action as soon as possible. Failure to do so may result in serious damage to the vehicle.

If the message is suppressed, an amber or red warning icon will remain illuminated until the cause of the message is rectified.

For information regarding the individual messages, their meanings, and any action required, please refer to the relevant section within this handbook.

If more than 1 message is active in the message centre, each will be displayed in turn for 2 seconds in order of priority.

Note: Messages are displayed in order of importance, with critical warning messages being the highest priority.

Warning messages may be accompanied by an audible warning, and the message text may have the handbook symbol next to it. Warning messages are displayed until the condition causing the fault is rectified or the message is suppressed using the **OK** button on the steering wheel. If the message is suppressed, a warning icon will remain illuminated until the cause of the message is rectified.

TRIP COMPUTER

The computer memory stores data for a journey or series of journeys until it is reset to zero. The displayed information is for guidance only, as it can be affected by traffic, road and weather conditions.


There are 3 trip memories available via the touch screen, **Trip A**, **Trip B** and **Trip Auto**.

To select a trip memory from the touch screen, go to **Set-up** then **Trip computer**.

Select a trip memory. Select **Reset** to zero the trip computer readings. Select **Units** to switch between imperial and metric measurements.

Trip computer information is displayed on the instrument panel.

USING THE TRIP COMPUTER

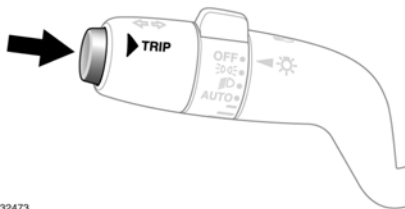

E132473

A short press (1 second or less) or a series of short presses of the **TRIP** button will change the trip computer display. The options available are:

- Trip distance.
- Range available from remaining fuel.
- Trip average fuel consumption.
- Trip average speed.
- Oil level (not V6 diesel).
- Instantaneous (short term average) fuel consumption.

To reset the displayed trip data, press and hold the **TRIP** button.

It is not possible to manually reset the **Auto trip** memory. This resets automatically each time the ignition is switched on.

TRIP DISTANCE

Distance travelled since the last memory reset. The maximum trip reading is 9 999.9 (kilometres or miles). The computer will automatically reset to zero if this distance is exceeded.