

7. When prompted, enter the PIN (Personal Identification Number) code into your device. See your device's operating instructions for more information.
8. Once your device is paired and connected to the system, a confirmation message will be displayed before switching to the **My music**, Bluetooth® wireless technology view.

Note: Due to the duration of a **Bluetooth** wireless technology search, it is advised that the time-out to home screen feature is switched off before attempting to search for **Bluetooth** wireless technology devices. This setting can be changed within **Set-up, Screen, Time out home**.

LOSS OF CONNECTION

If a loss of connection between the vehicle and the **Bluetooth**® wireless technology device occurs, a pop-up is displayed. Select **Reconnect** to automatically restore the connection. A confirmation pop-up will appear before the touch screen reverts to its previous mode.

CHANGING/DISCONNECTING A DEVICE

1. From the playback control menu, select **Settings**.
2. From the **Settings** menu, select **Register**.
3. Select **Disconnect**. A confirmation pop-up will appear and then you will be given the option to **Search new** or select a different device from the list of paired devices.