


# Heating and ventilation

## CLIMATE CONTROL

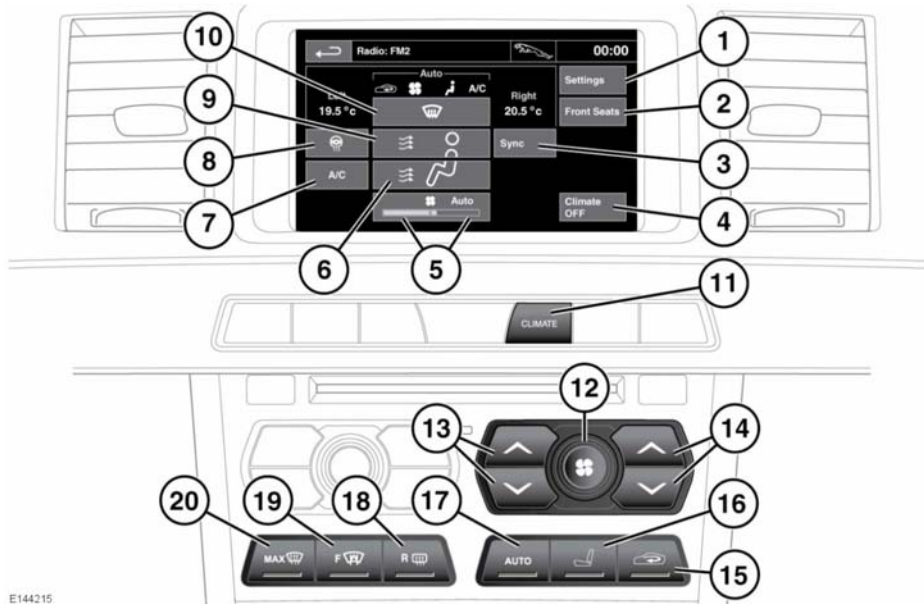

E144215

To access the Climate menu on the touch screen, select **Climate** from the home menu.

1. Touch to change the personal climate zone settings, to set the vent rotation mode and the automatic air recirculation sensor control settings.
2. Touch to access seat heating/ climate seat menu.
3. Touch to synchronize the passenger's climate zone to the driver's settings.
4. Touch to turn climate control off.
5. Indicates blower speed.
6. Touch to select air distribution to feet.
7. Air conditioning on. When the air conditioning is turned off, Economy mode is selected, which reduces the power consumed by the climate system.

**Note:** Prolonged use of Economy mode may cause the windows to mist.

8. Touch to select steering wheel heater on/off.
9. Touch to select air distribution to face.
10. Touch to select air distribution to the windscreen.
11. Press to short cut to touch screen climate menu.

**Note:** Not fitted on vehicles with the Navigation system.

12. Blower speed: Rotate to adjust blower speed.

Blower speed is automatically set in Auto mode. Adjusting the blower speed will cancel Auto mode.

Press centre button to switch climate system on/off.